

# SERVICE HANDBUCH SERVICE MANUAL

**NORDMENDE**  
THOMSON TECHNOLOGY


**VIDEO**  
COLLECTION

NORDMENDE SPECTRA


V 1000 IMC / 993.301 N  
V 1202 SV / 993.306 N  
V 1303 SV / 993.319 N  
V 1404 SV / 993.324 N

Schaltungen  
Circuit diagrams


## Lageplan der Leiterplatten Circuit board location

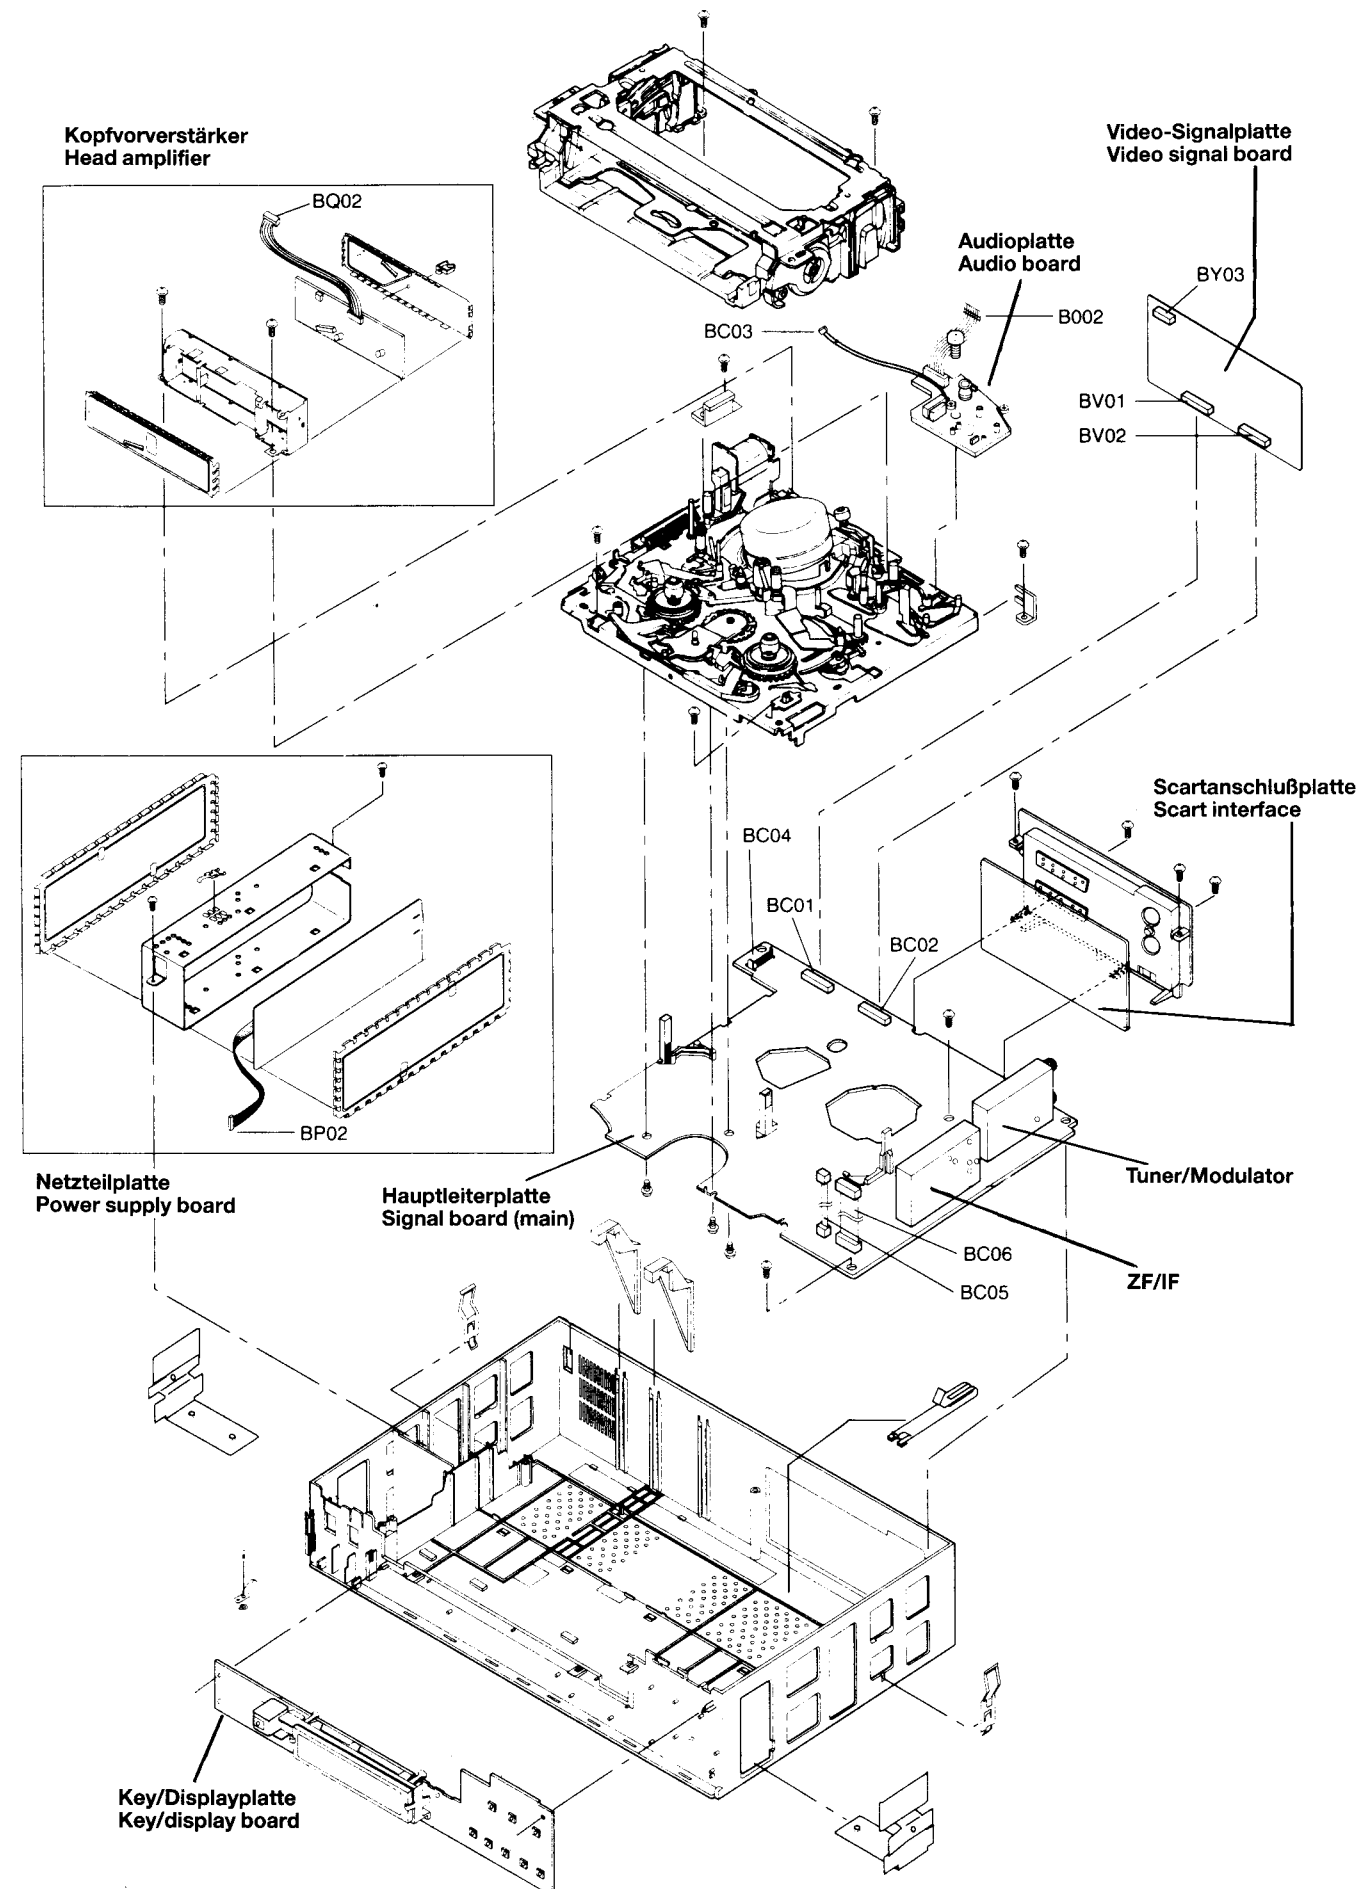


Verdrahtungsplan  
Overall wiring diagram

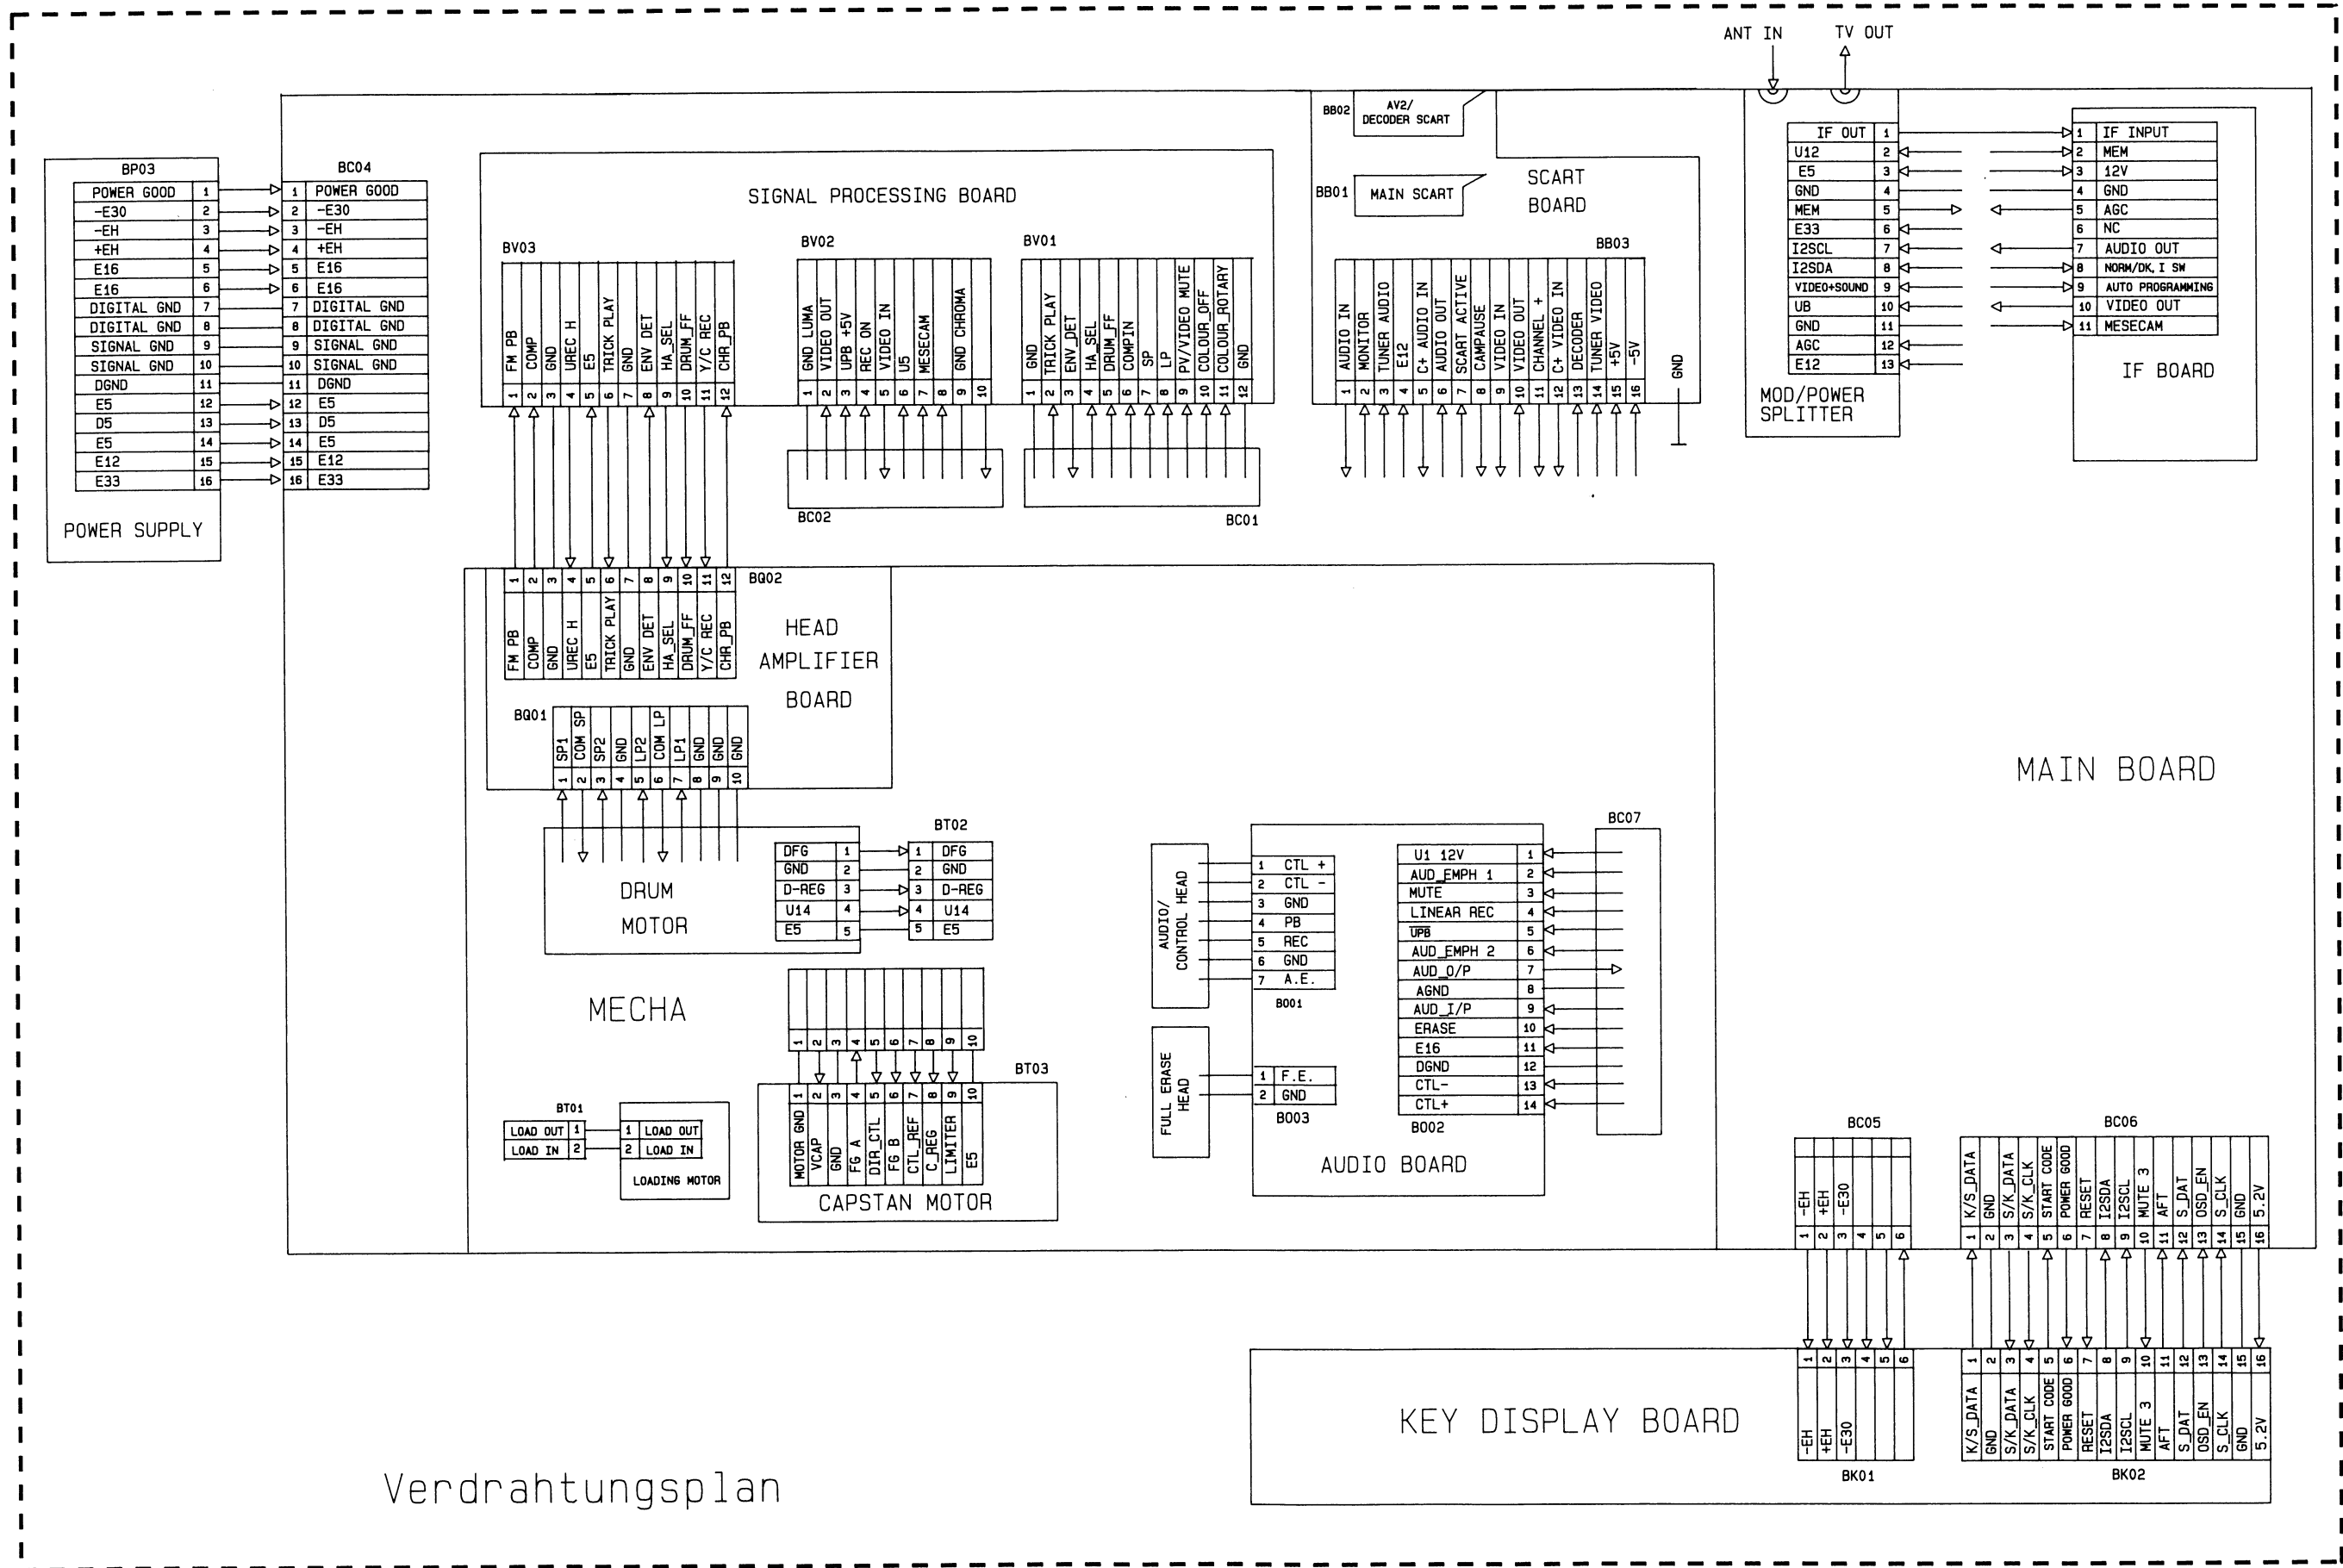


Verdrahtungsplan

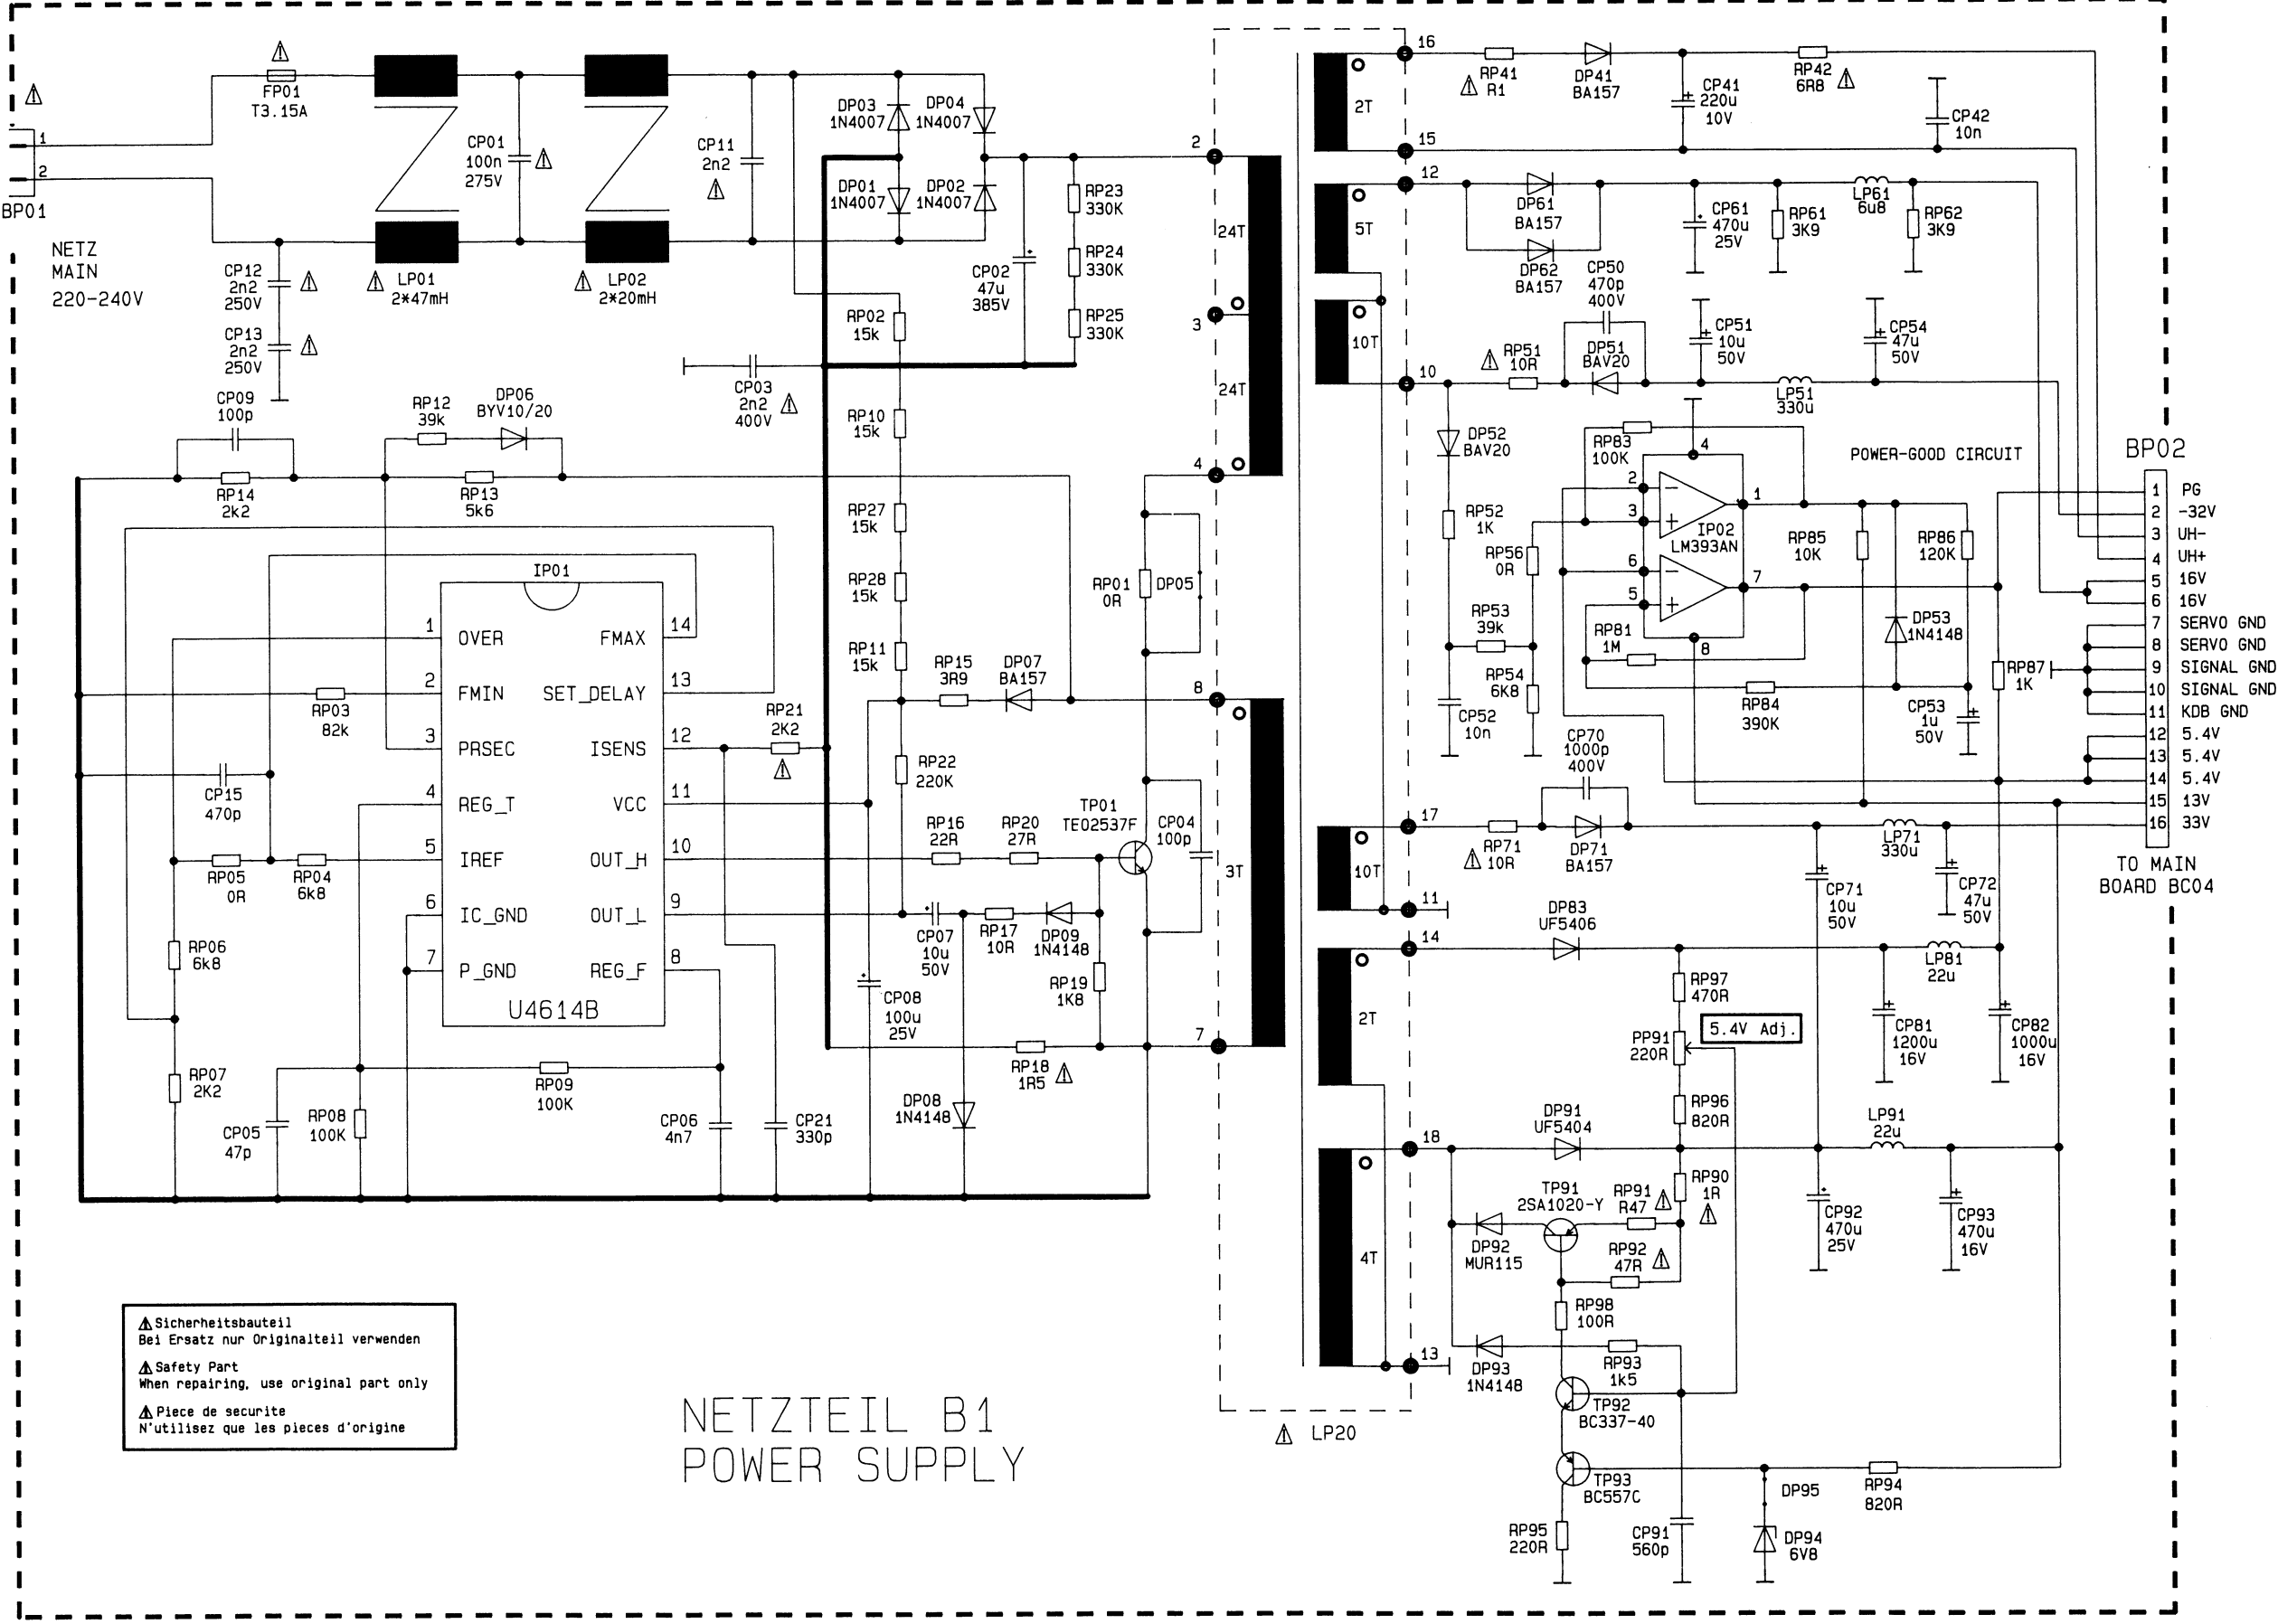




# Hauptleiterplatte Mainboard

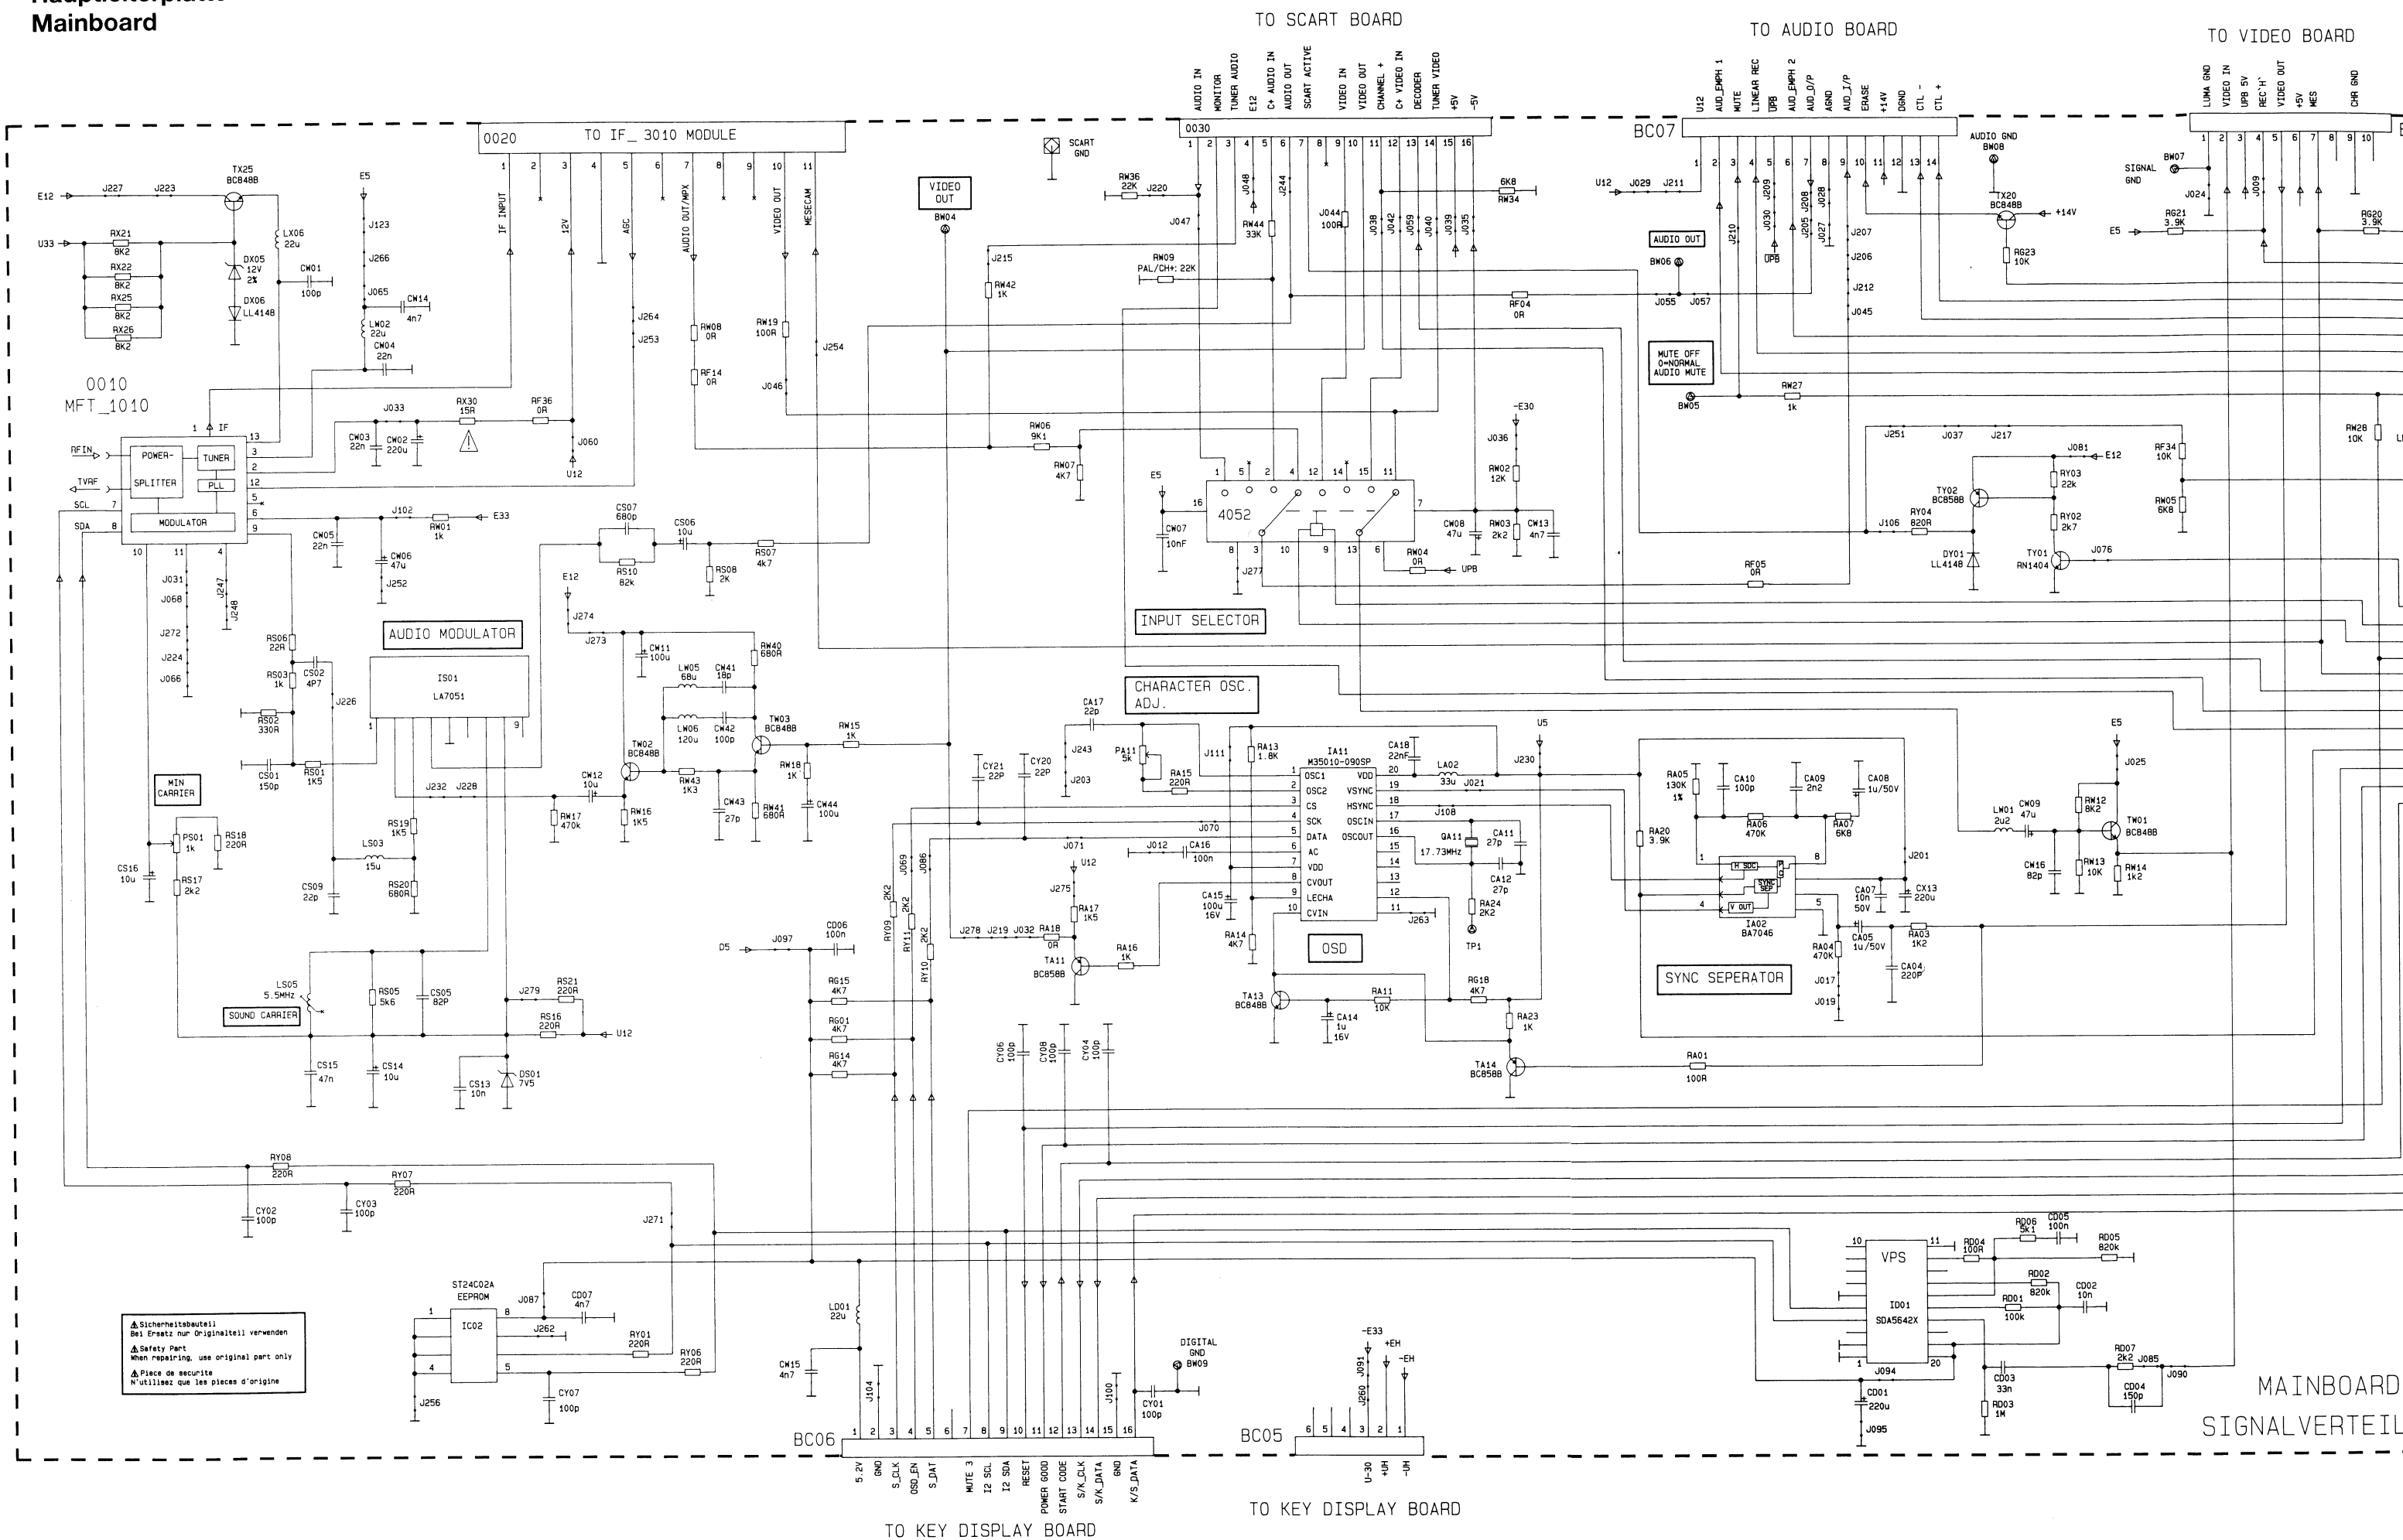




# Mechaniksteuerung/Servo Mechacon/Servo

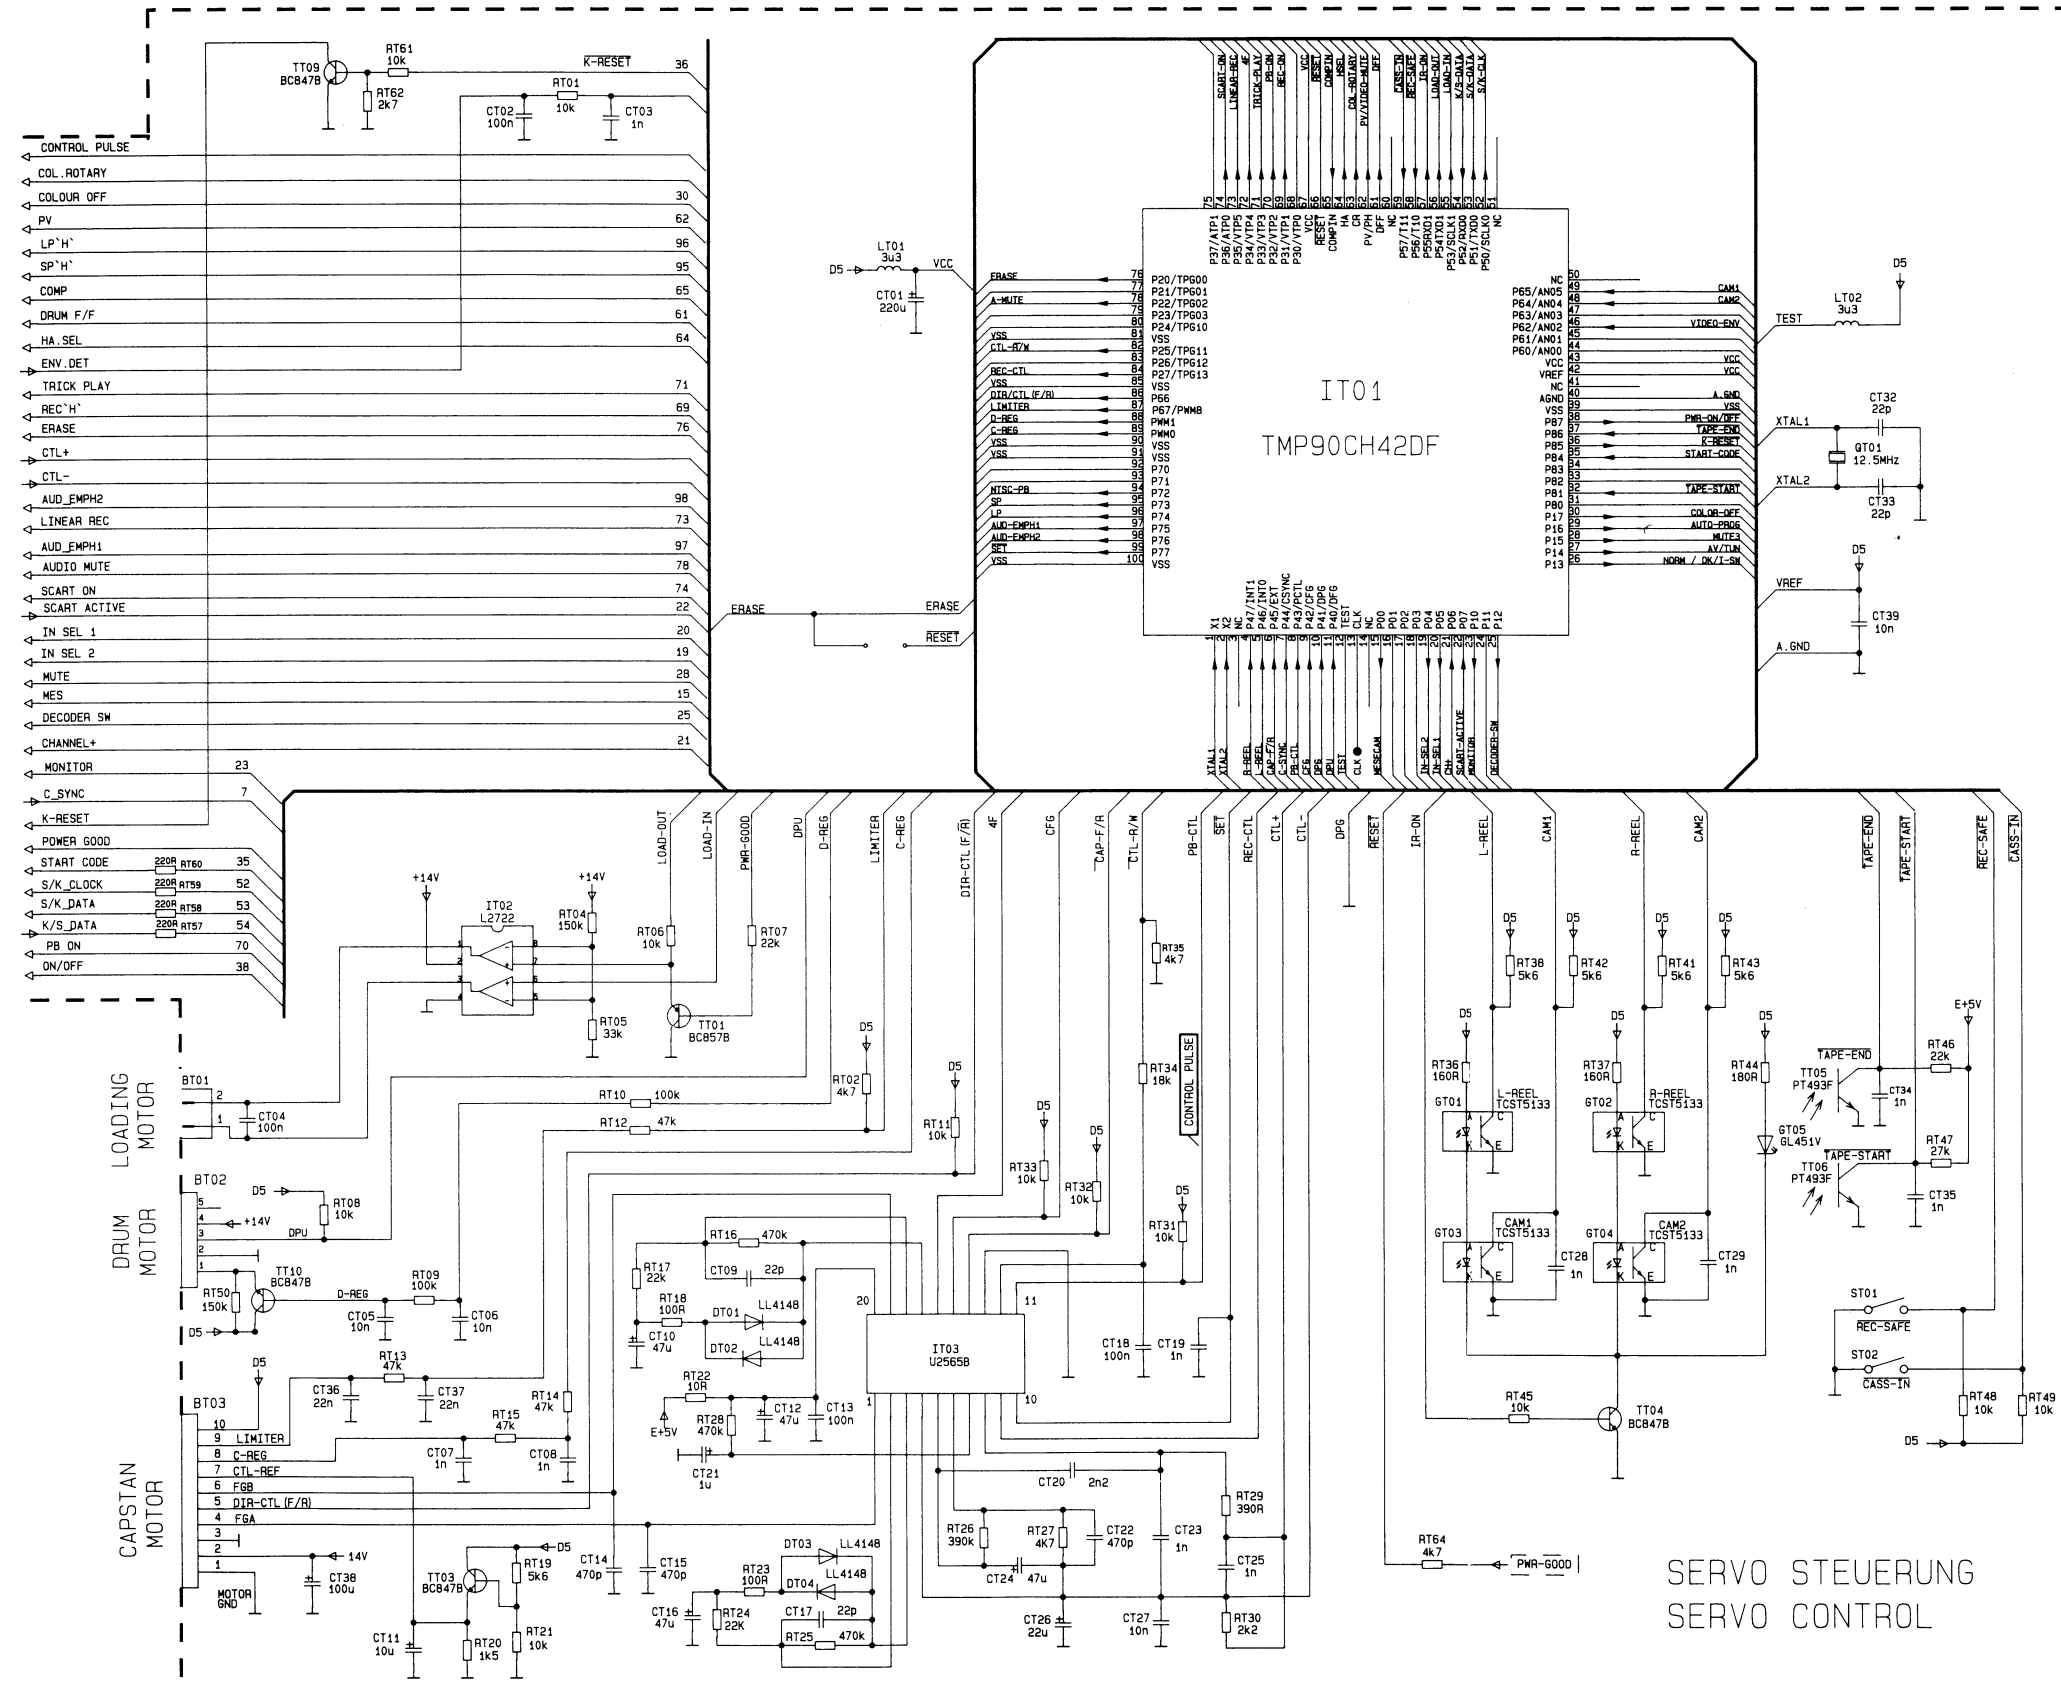


## Videosignalschaltung

### Video signal circuit

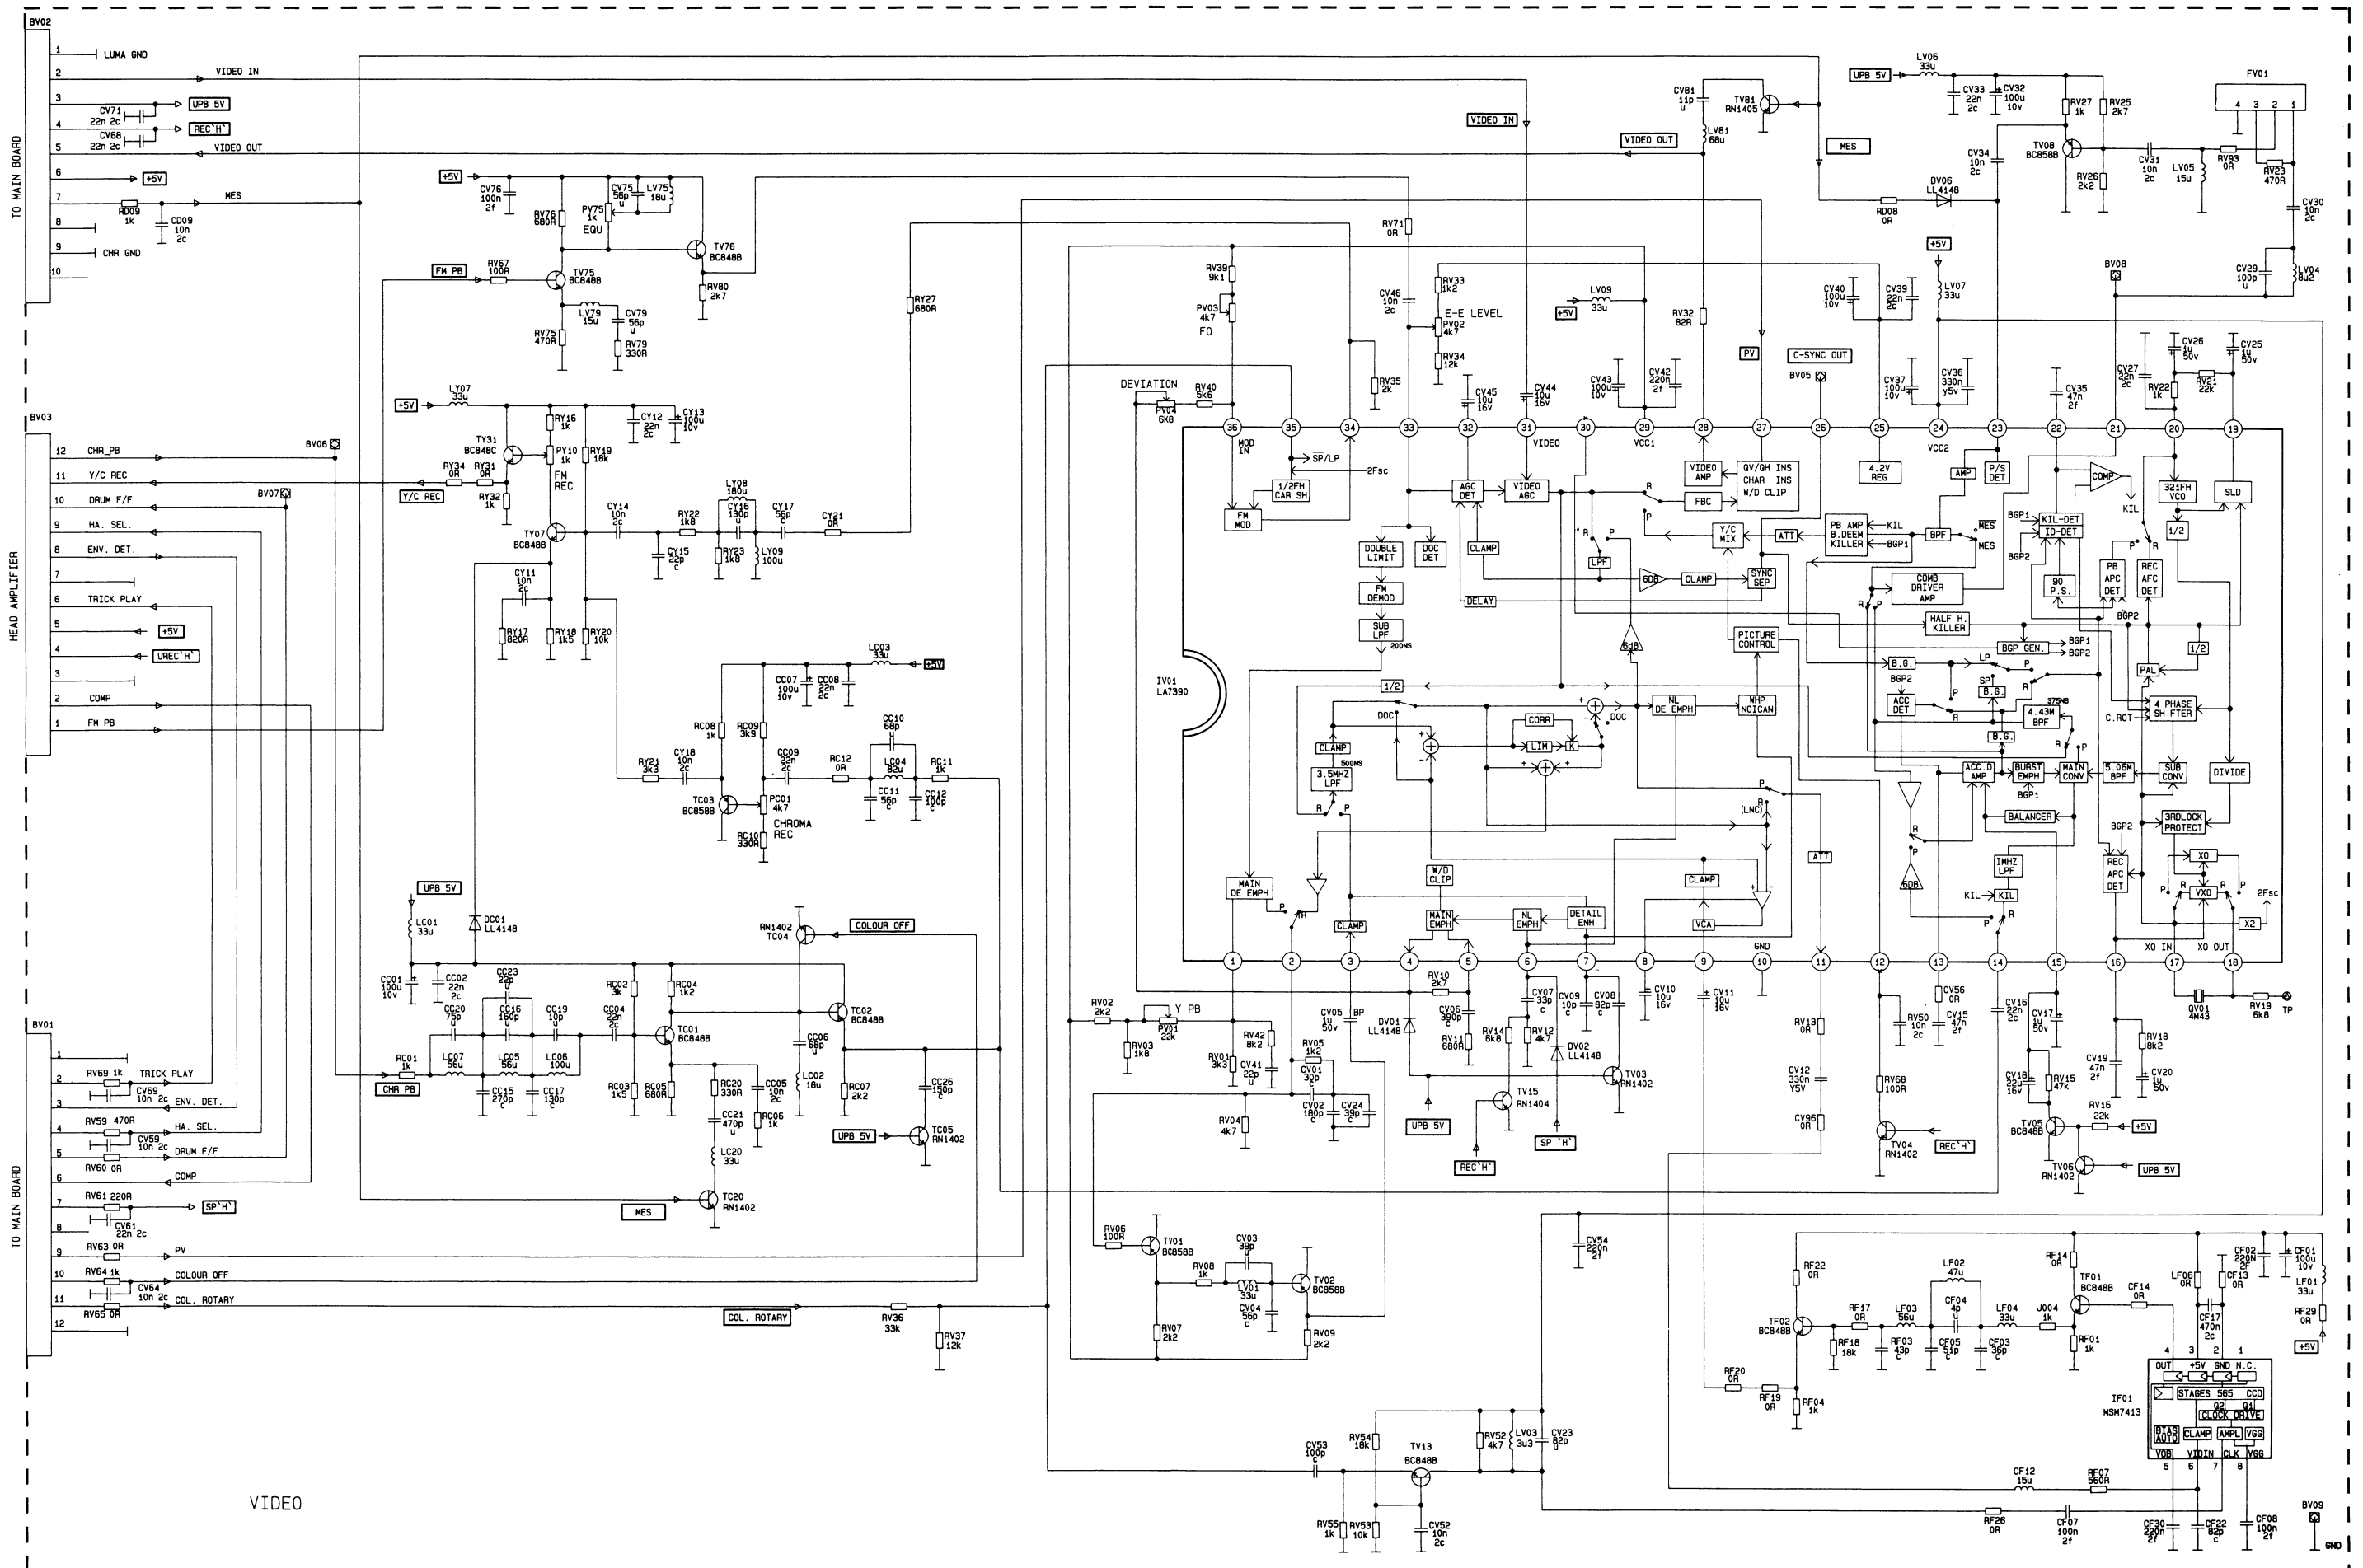


Bedienteil  
Key/Display

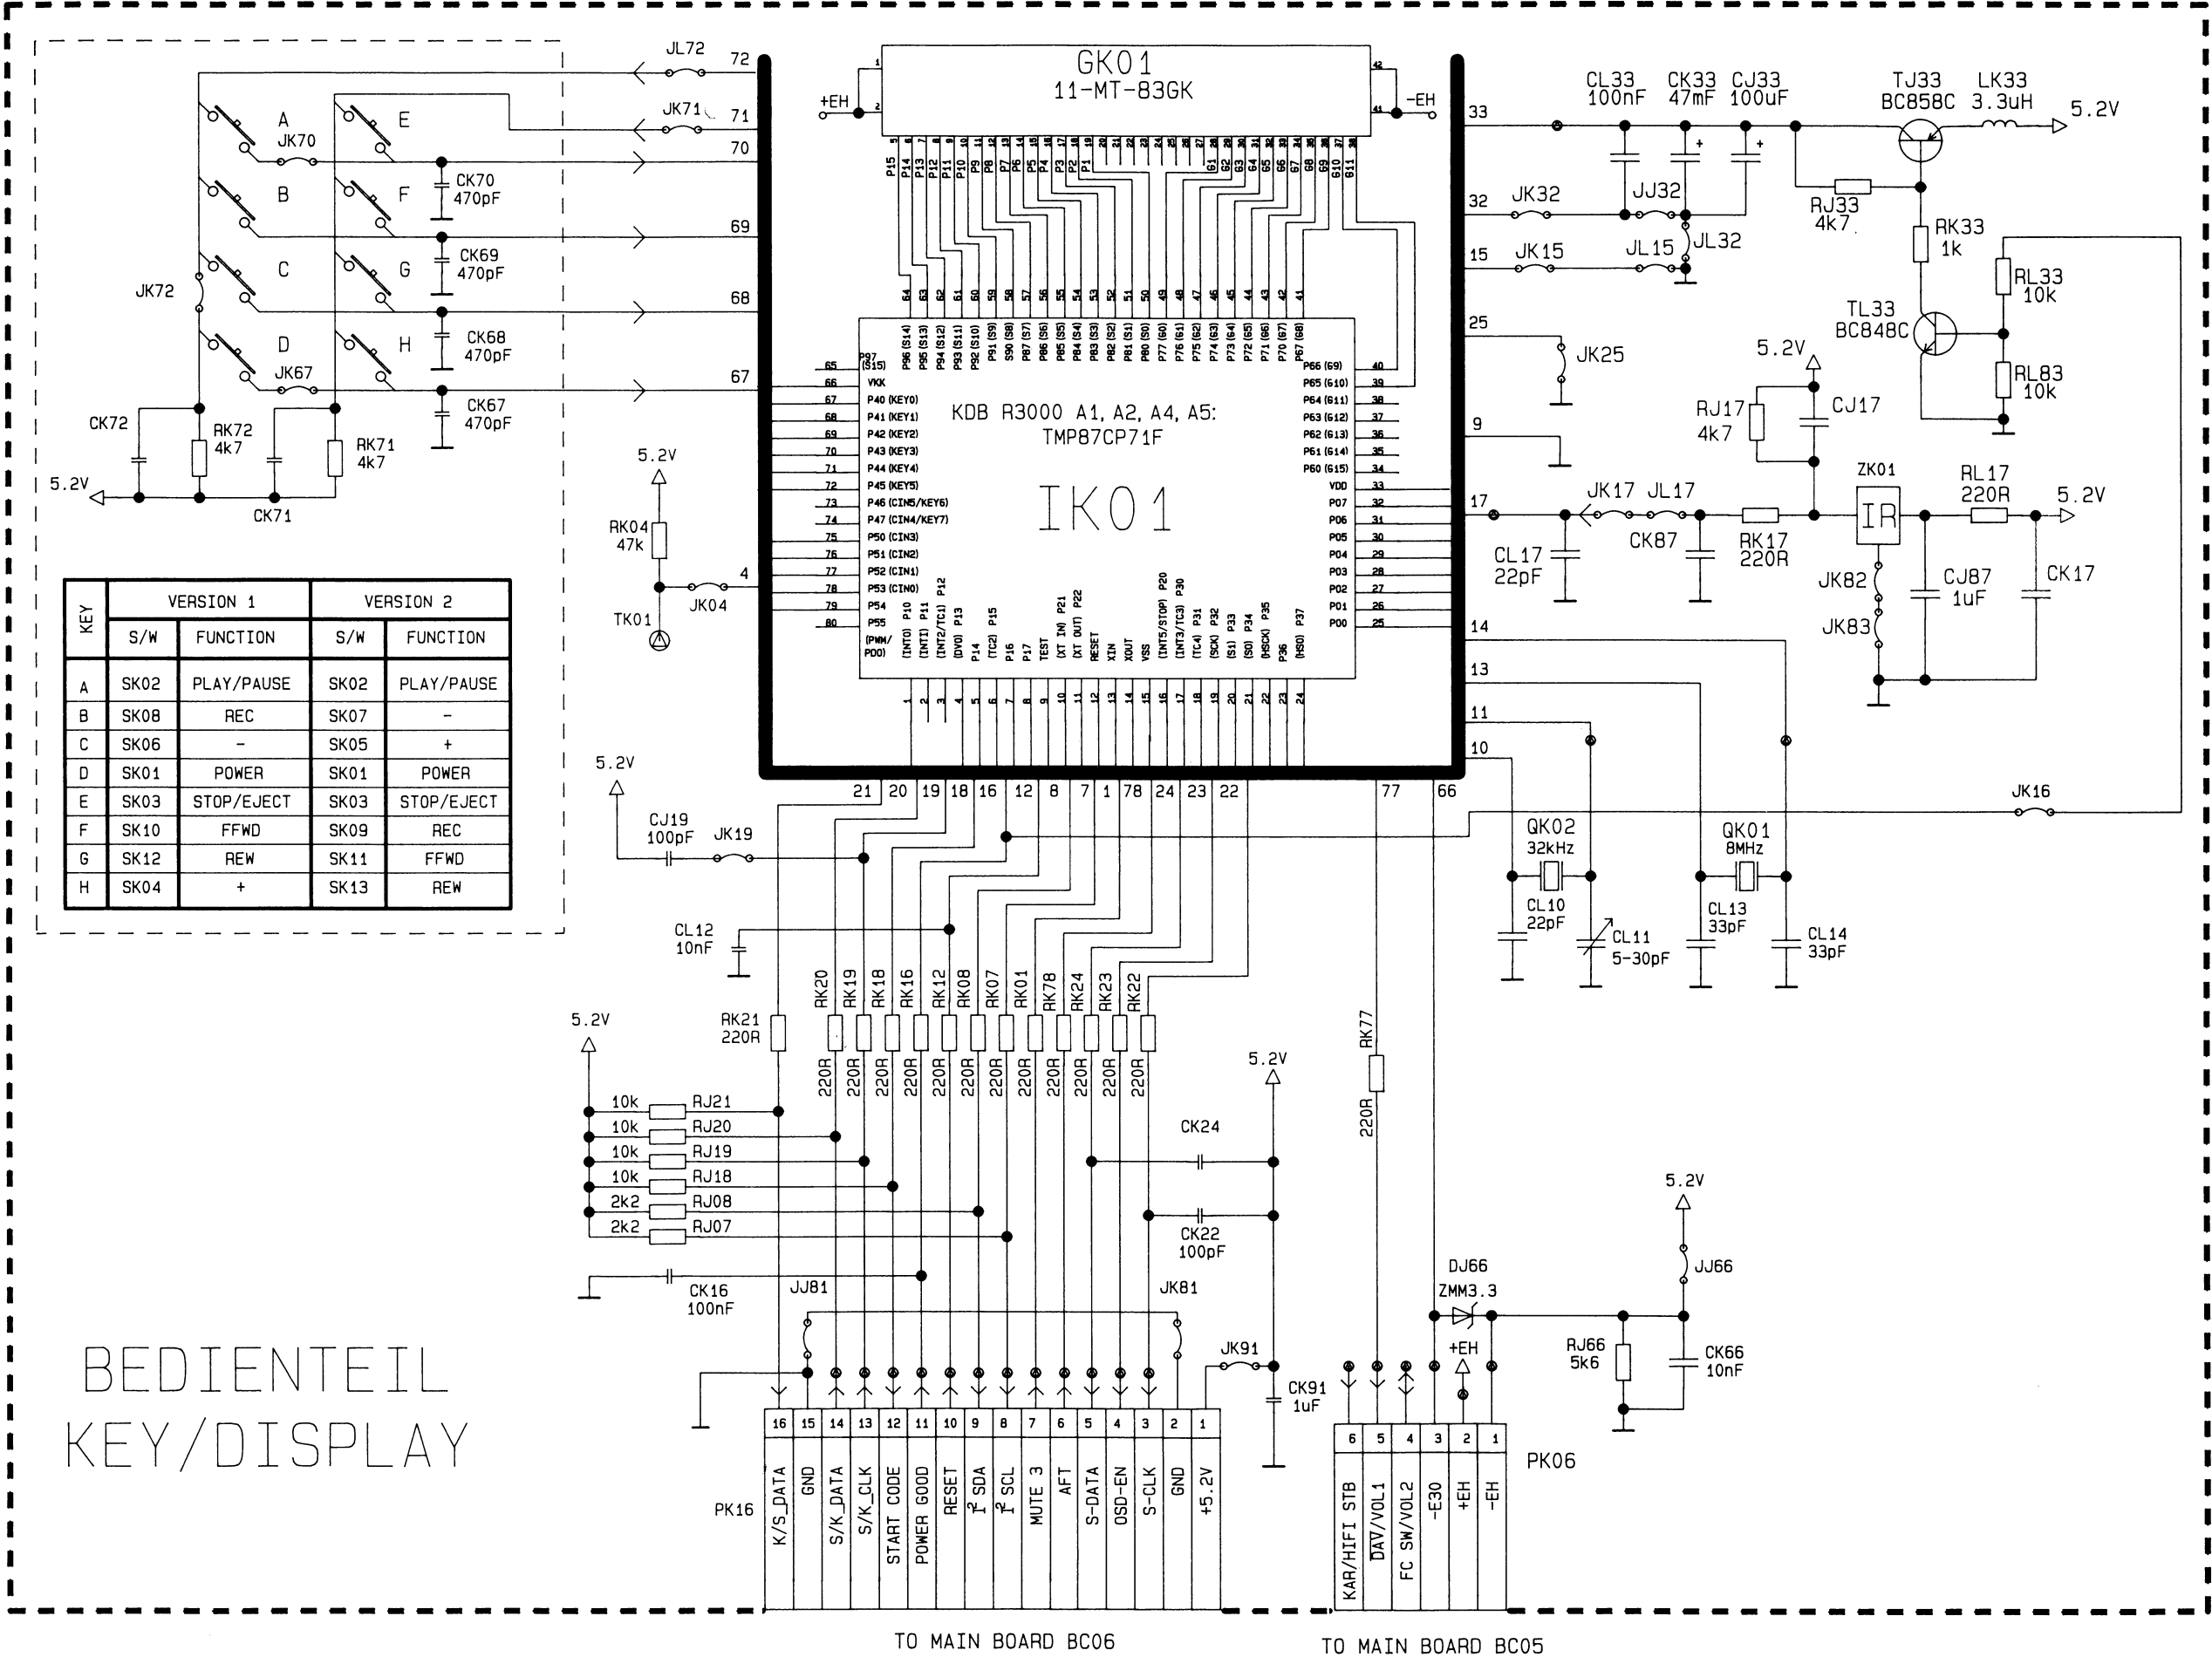


KEY	VERSION 1		VERSION 2	
	S/W	FUNCTION	S/W	FUNCTION
A	SK02	PLAY/PAUSE	SK02	PLAY/PAUSE
B	SK08	REC	SK07	-
C	SK06	-	SK05	+
D	SK01	POWER	SK01	POWER
E	SK03	STOP/EJECT	SK03	STOP/EJECT
F	SK10	FFWD	SK09	REC
G	SK12	REW	SK11	FFWD
H	SK04	+	SK13	REW

BEDIENTEIL  
KEY/DISPLAY


# Tuner/Modulator

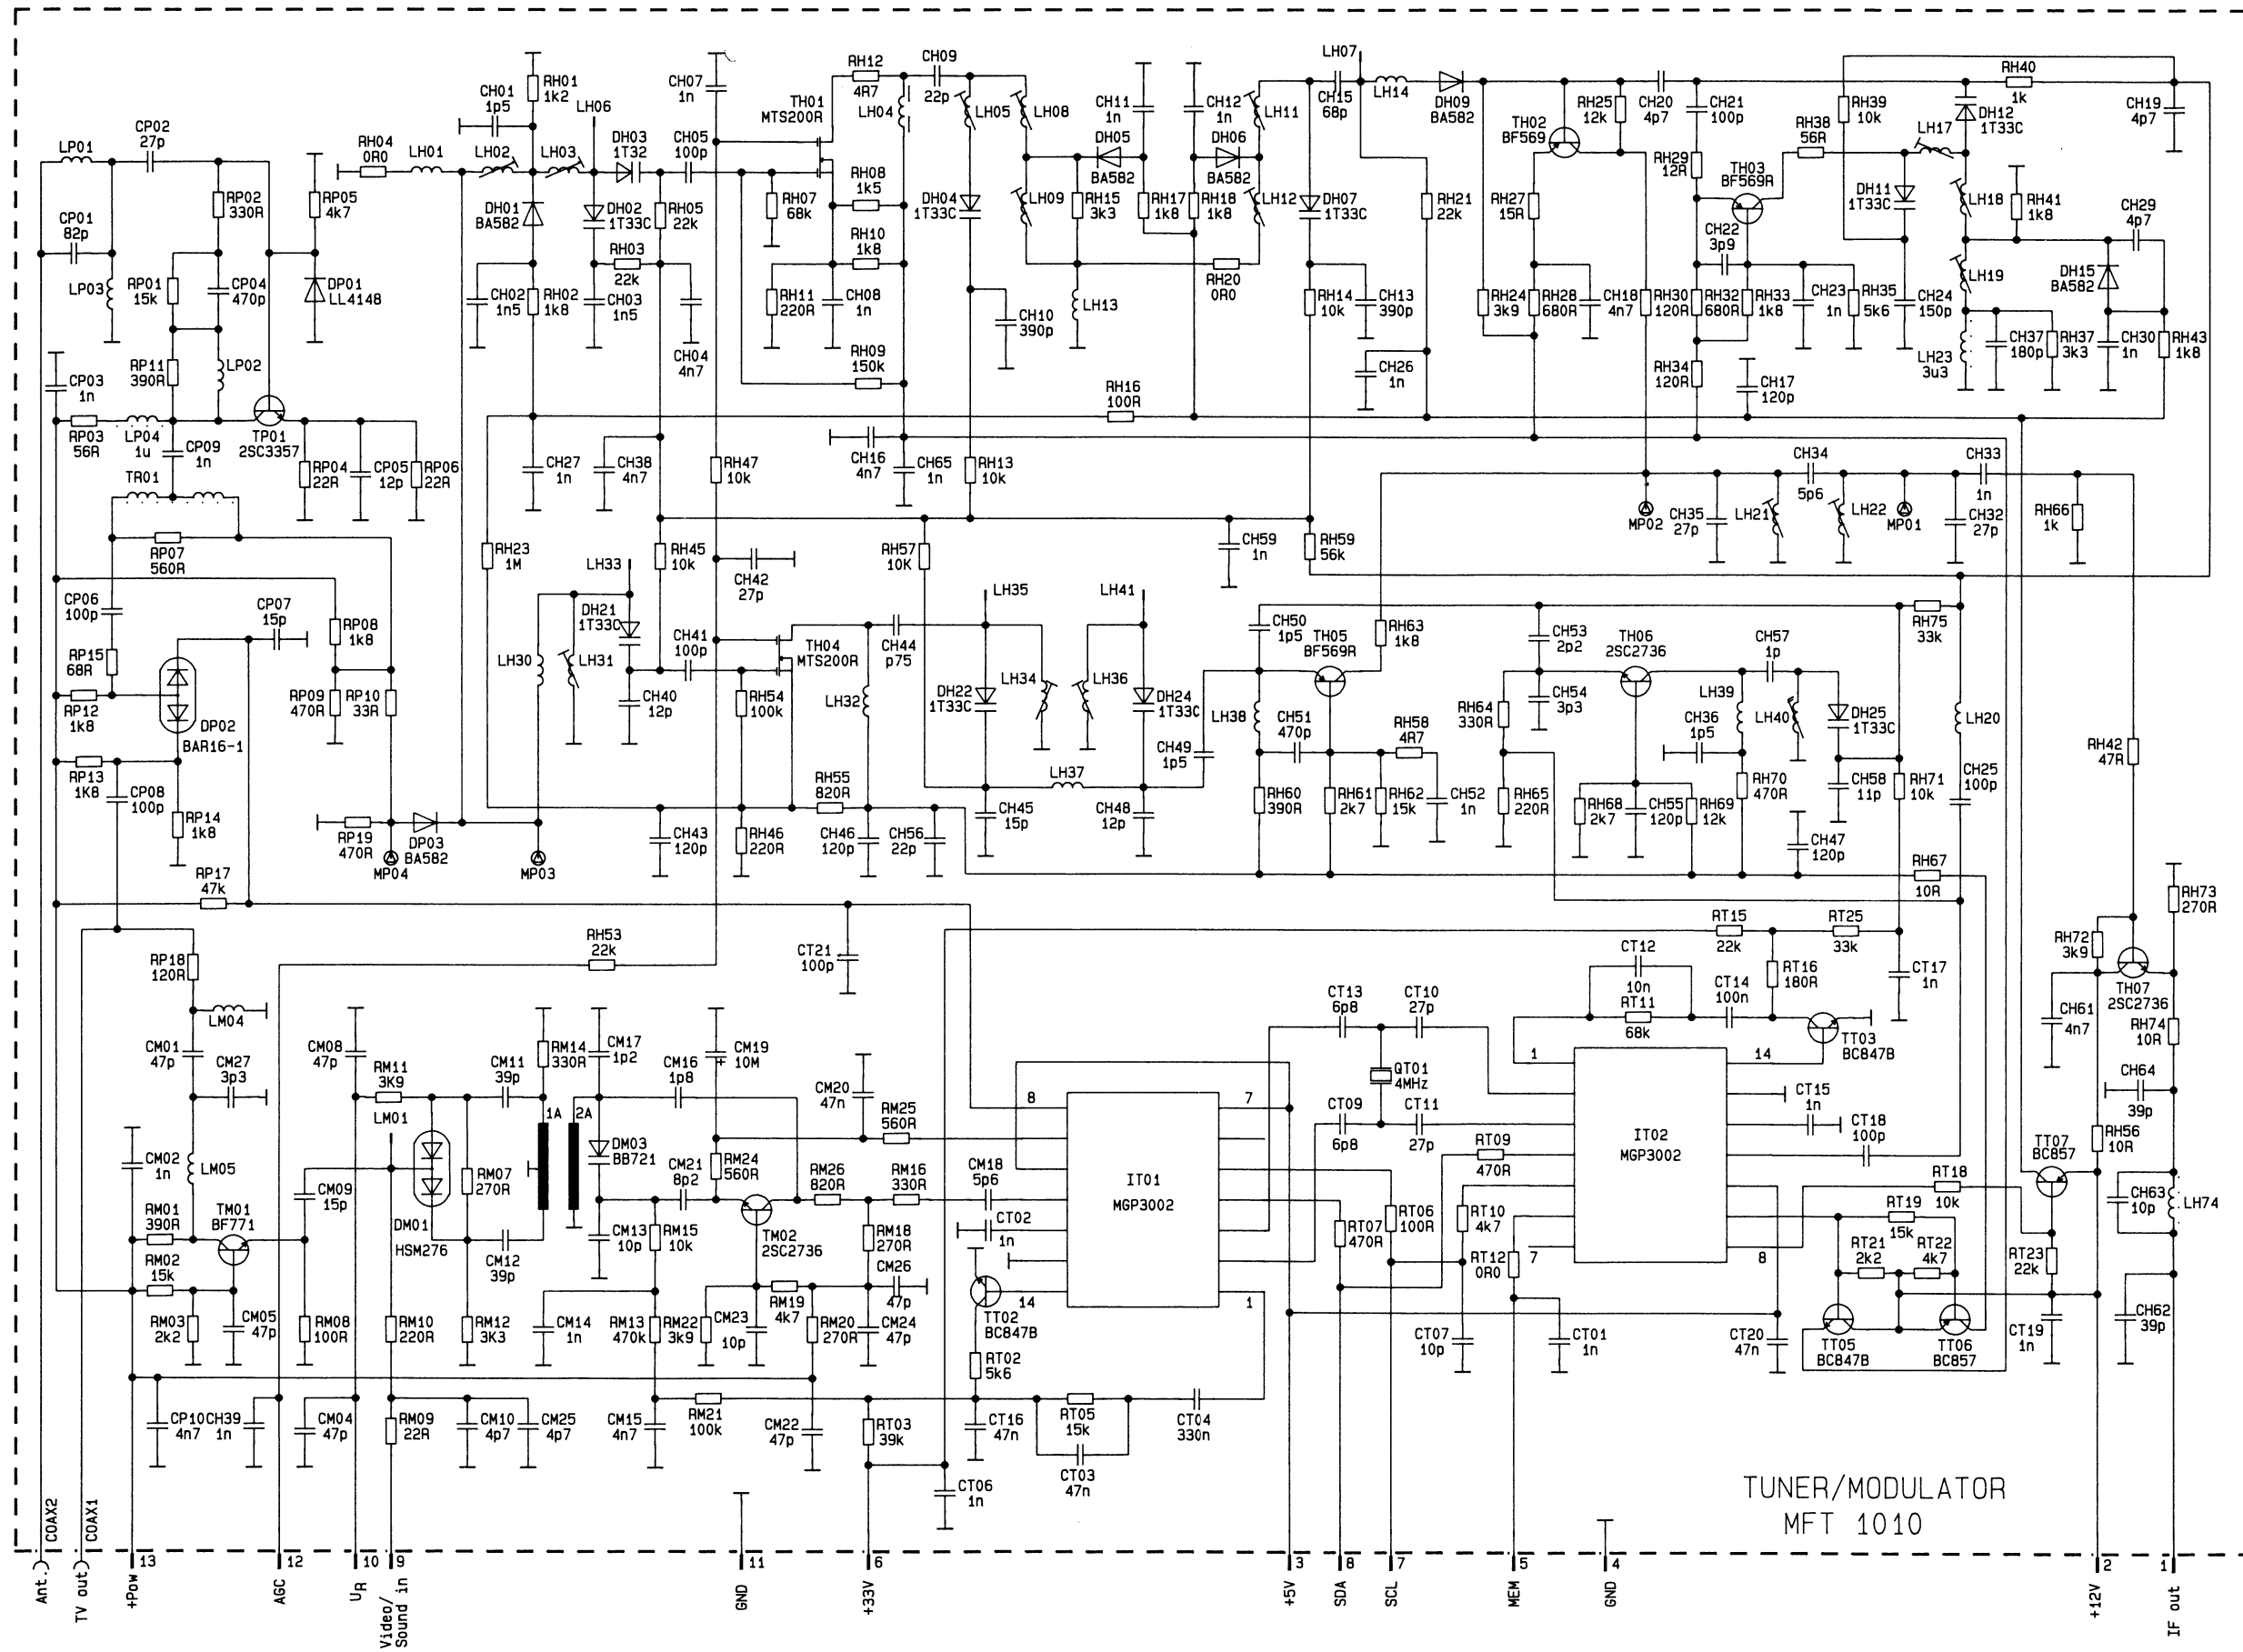

## Audio

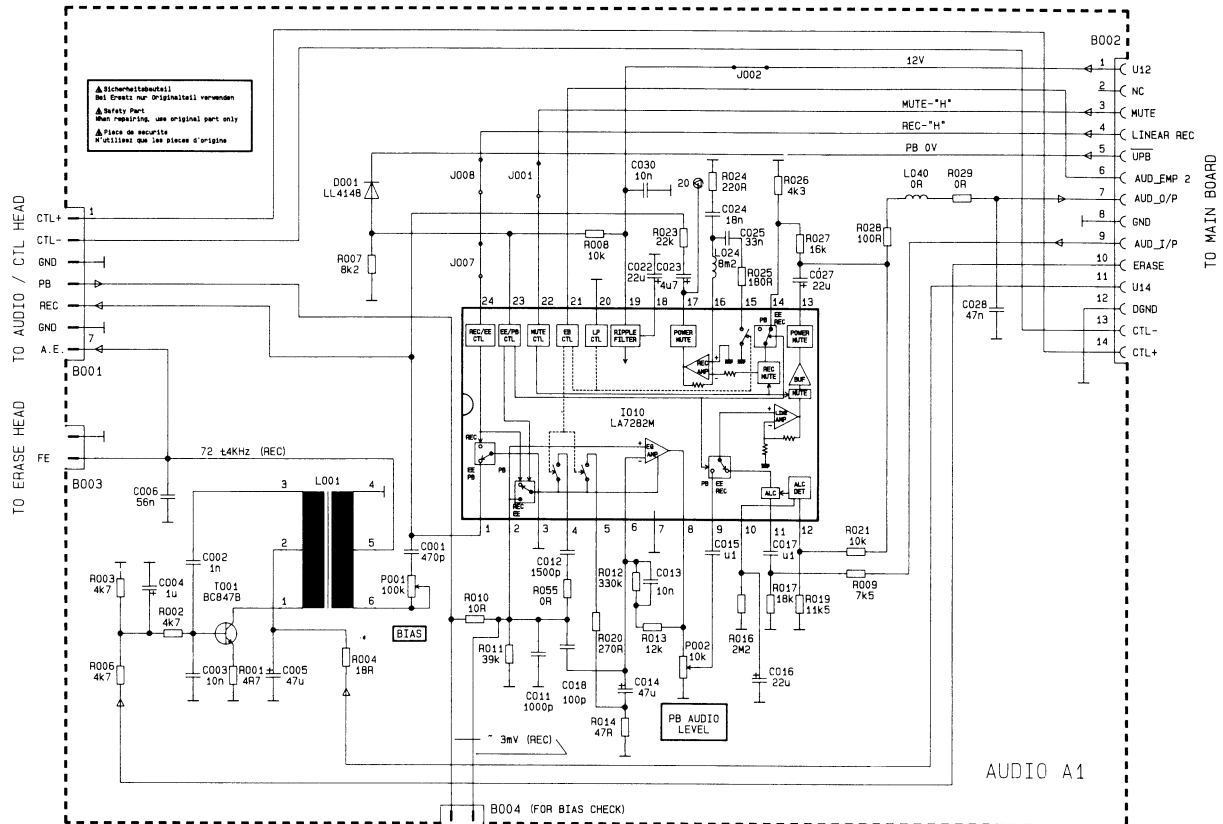


## Scartanschlußplatte A 1 Scart interface A 1

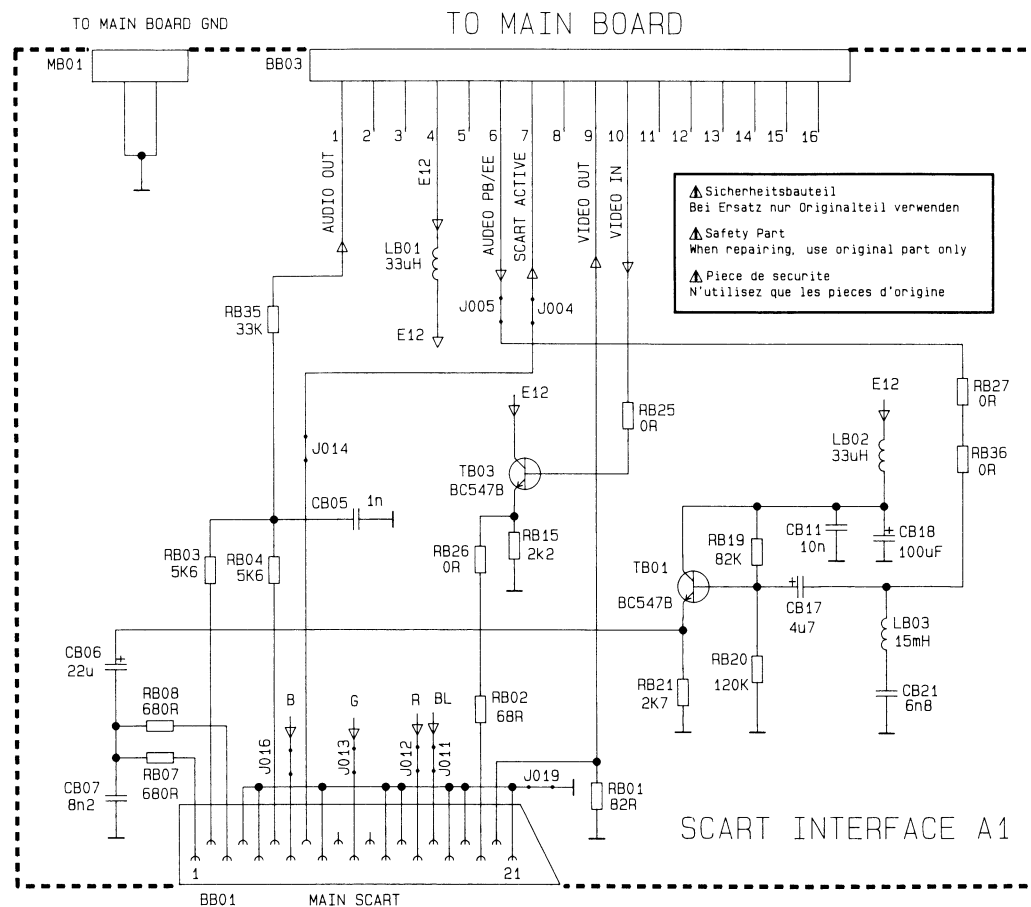


# Scartanschußplatte A 2


## Scart interface A 2

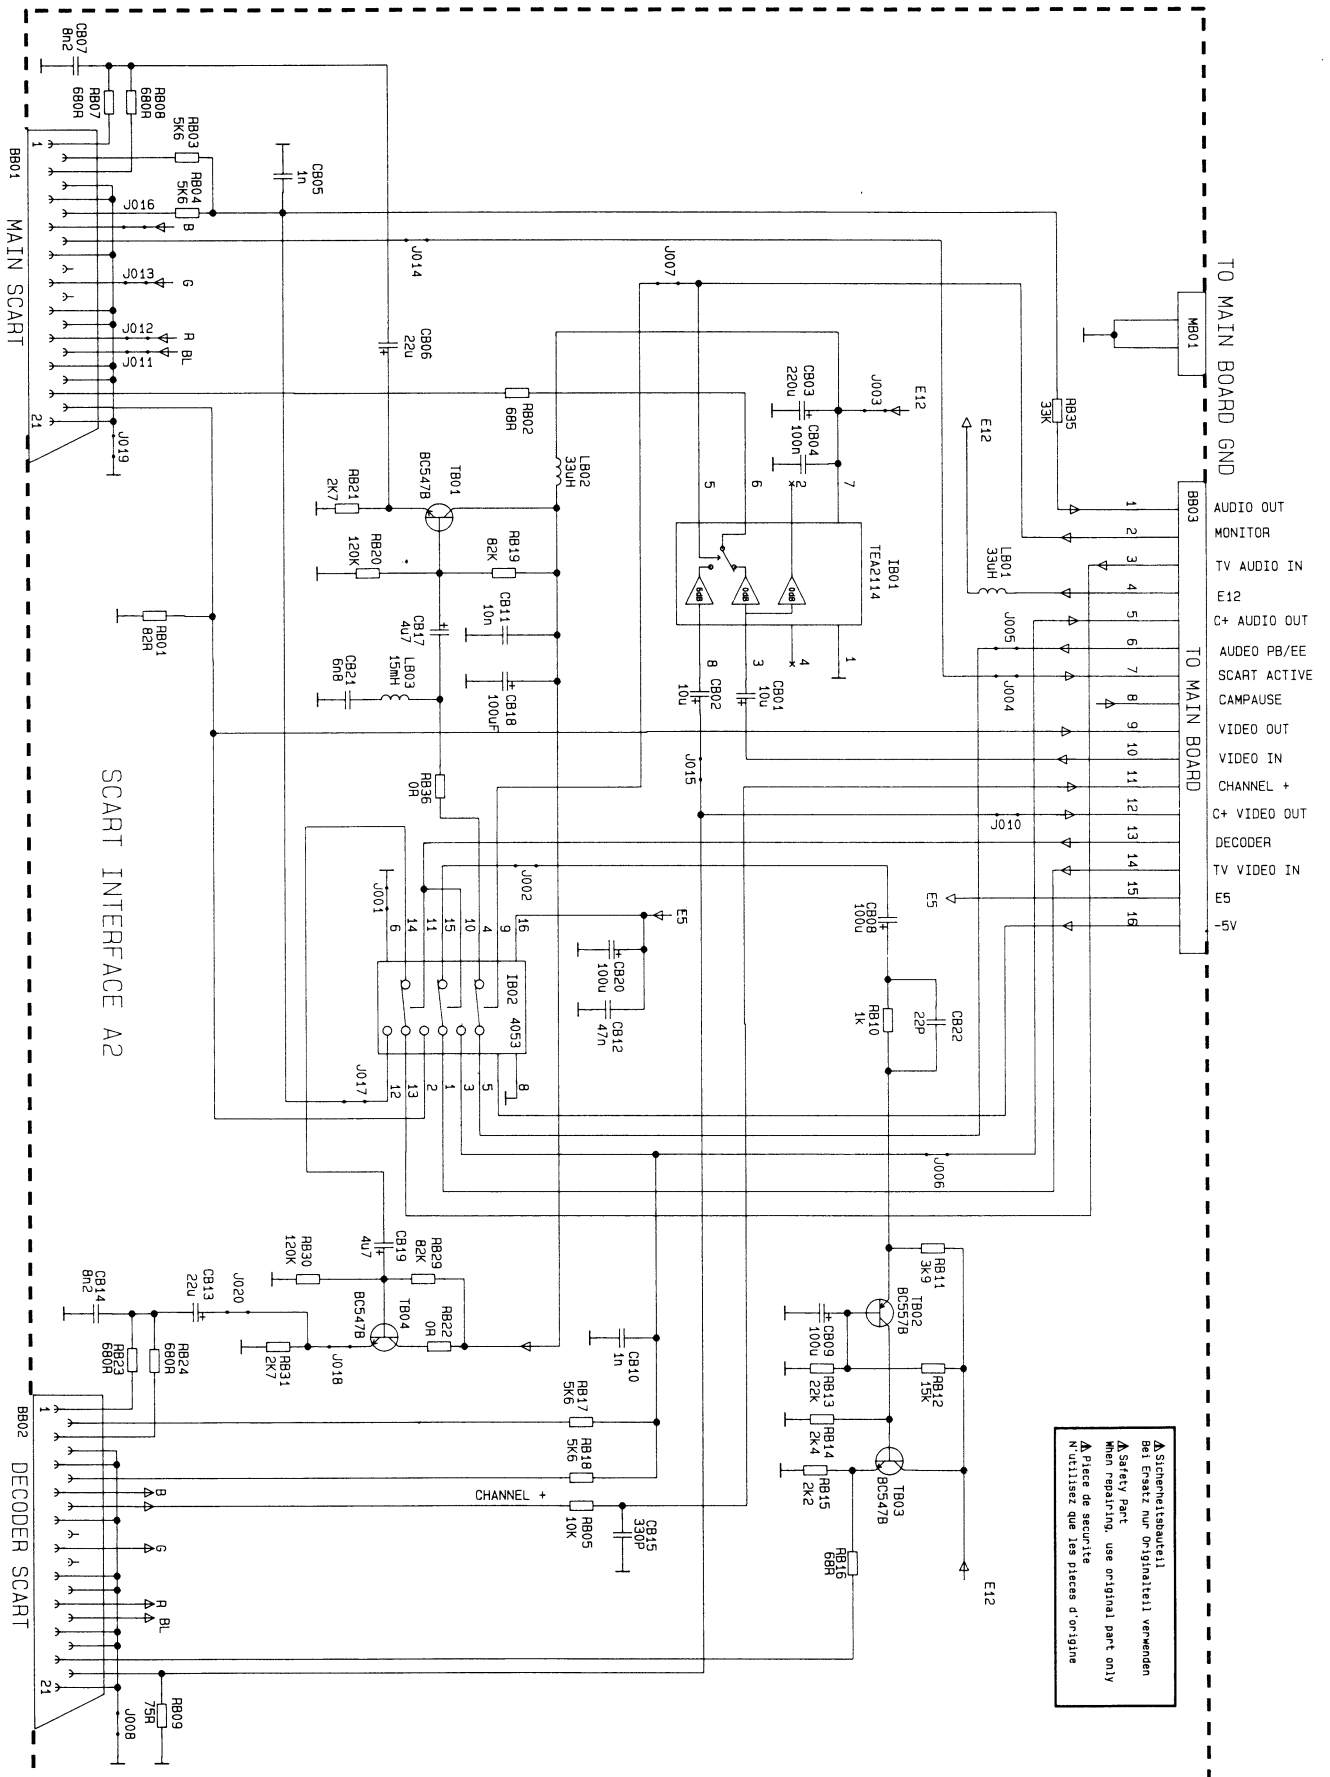


# Kopfvorverstärker (2 Köpfe SP und LP) Head amplifier (2 heads SP and LP)

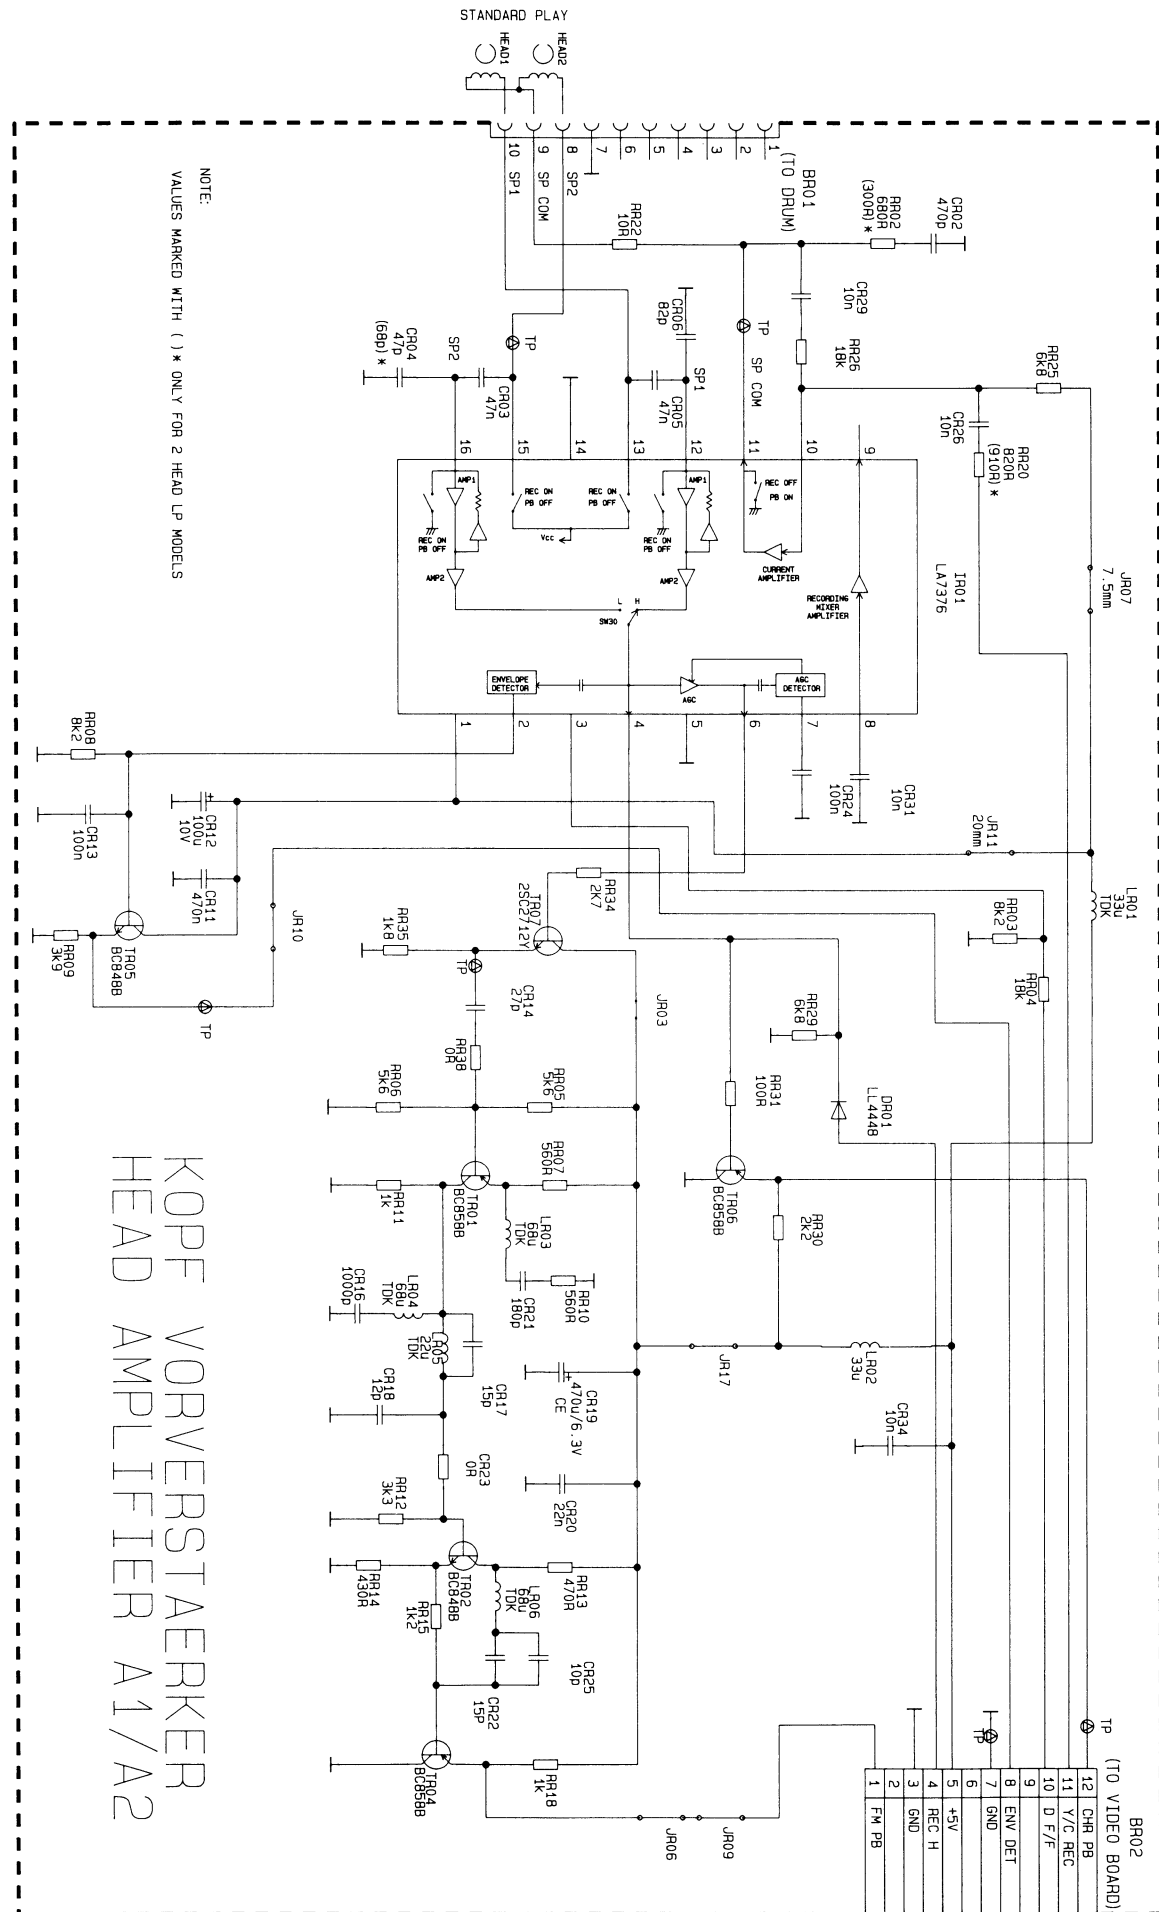

# Kopfvorverstärker (3 Köpfe) Head amplifier (3 heads)

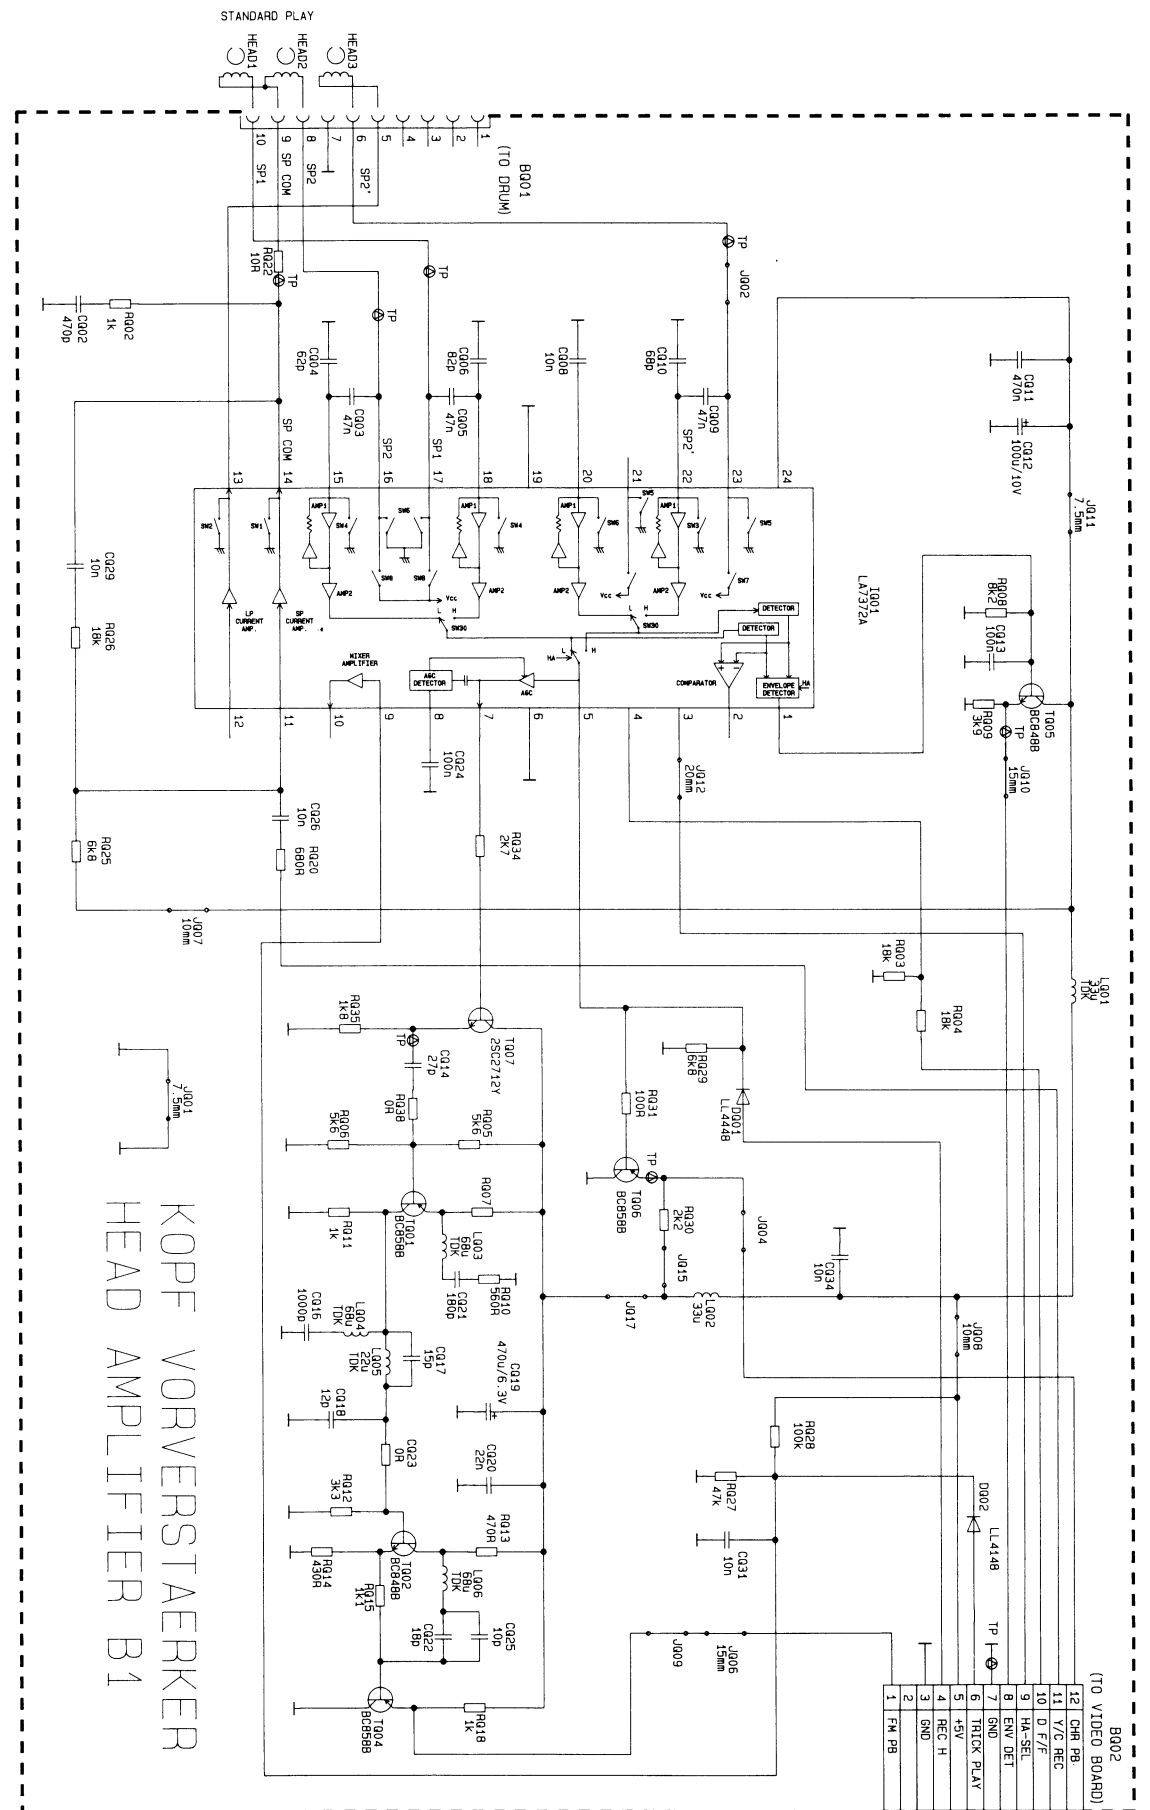

# Kopfvorverstärker (4 Köpfe) Head amplifier (4 heads)

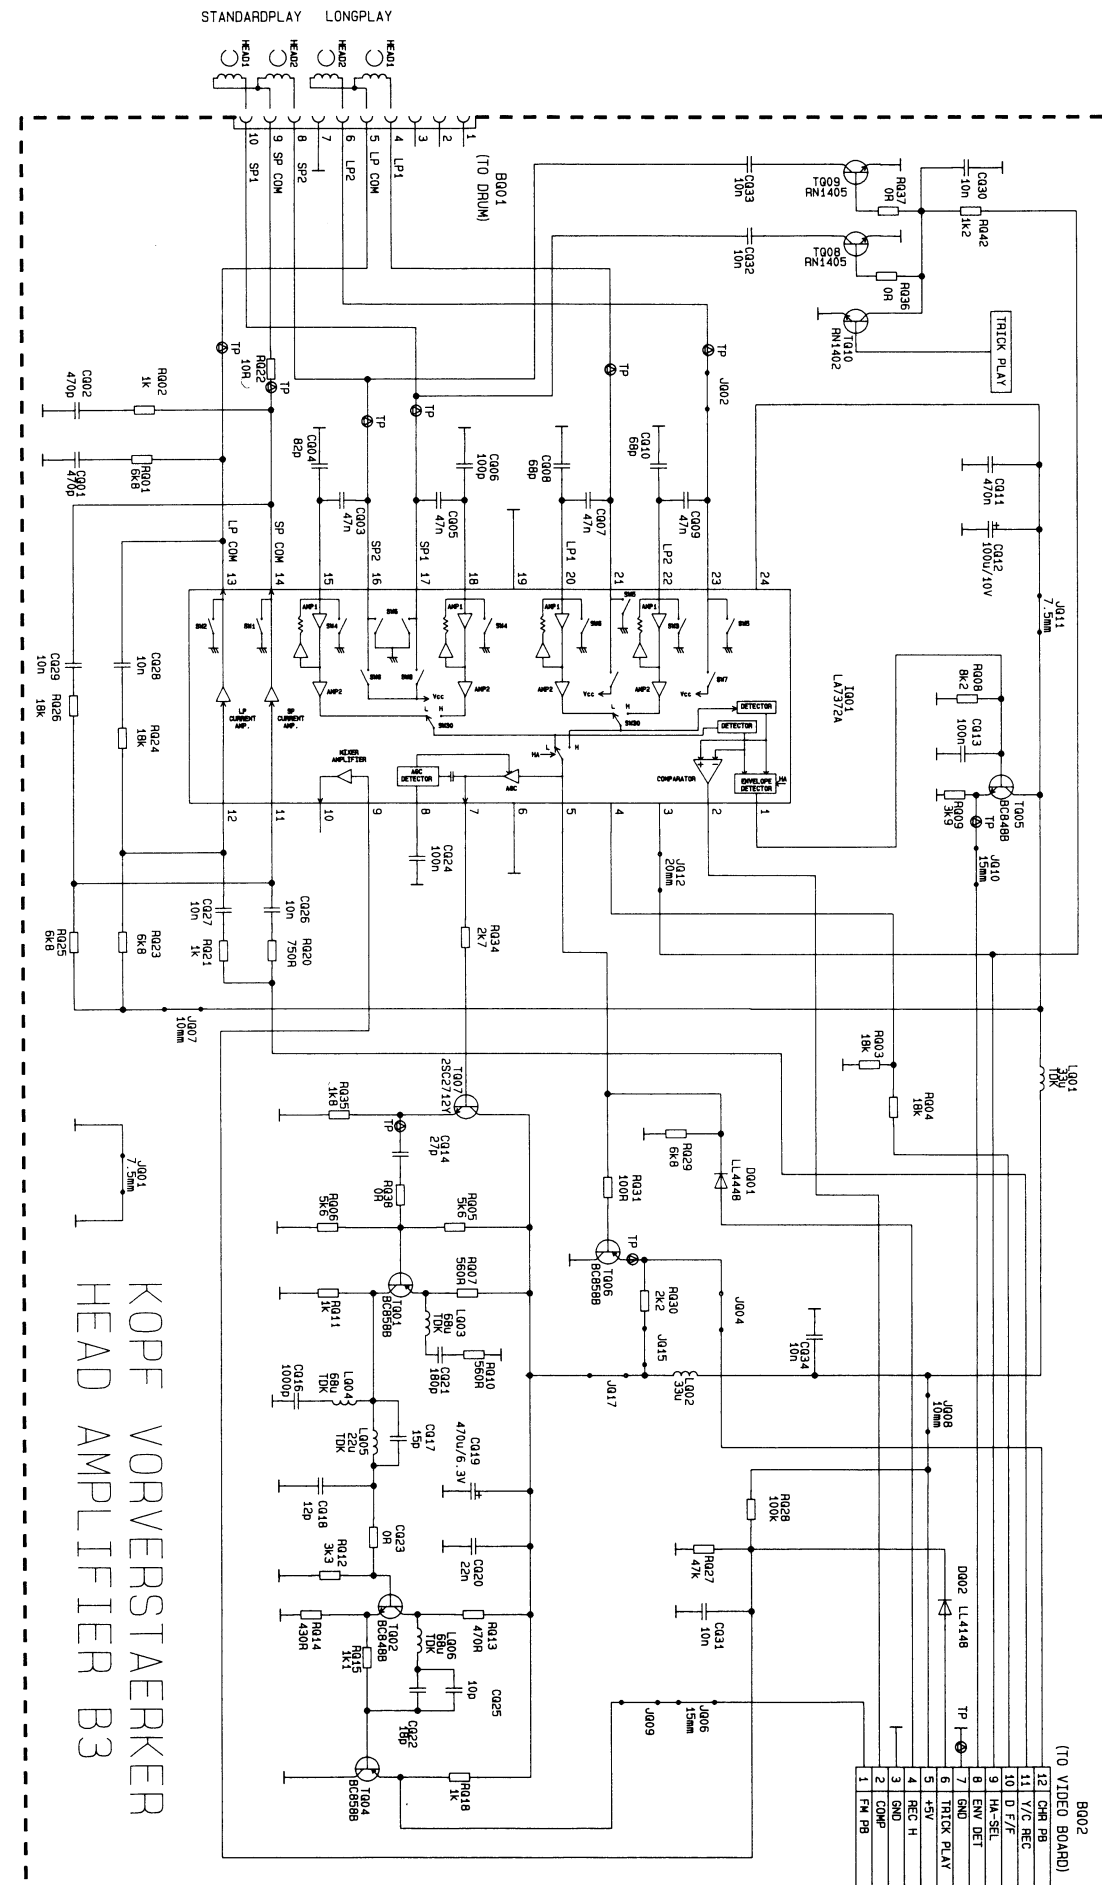

# Kopftrommelmotor Drum motor

